


Nyto Track 48V Adjustable 50 1x LED


138401XX_138402XX_138404XX_138405XX_138407XX_138408XX_138410XX_138411XX_138413XX_138414XX_138416XX_138417XX_138419XX_138420XX_138422XX_138423XX_138425XX_138426XX_138428XX_138429XX_138430XX_138431XX

1.1 INSTALLATION



ONLY TO BE INSTALLED OUTSIDE ARM'S REACH

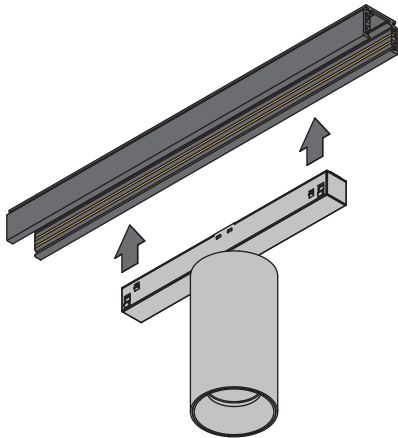



VOLTAGE	48 V
POWER super spot	11 W
POWER spot	14.9 W
POWER medium, flood, wide flood (1-10V)	14.9 W
POWER medium, flood, wide flood (DALI)	19.3 W
POWER warm dim flood	9 W

 

1.2 INSTALLATION

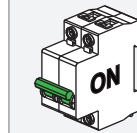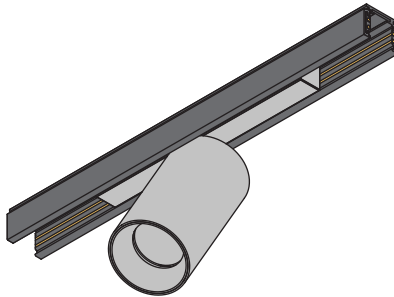


 2.1 UNINSTALL


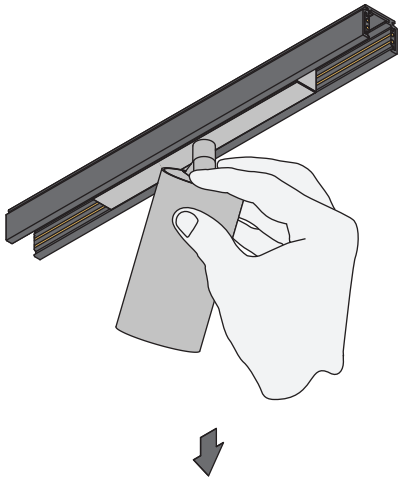


Turn off power before taking out luminaires from the track system

2.2 UNINSTALL

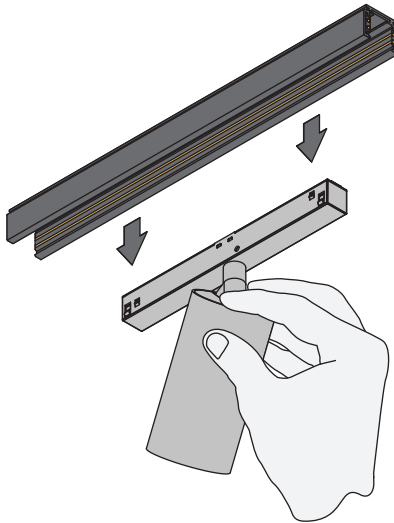

ELECTRICAL

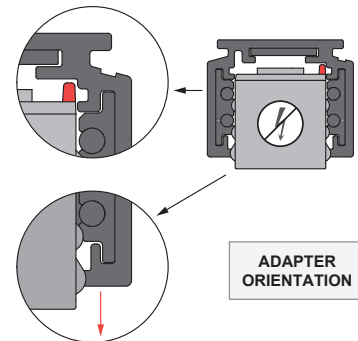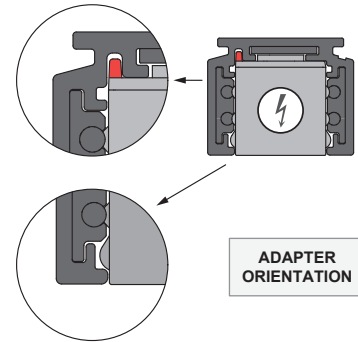

Replace protective shield when broken. The luminaire shall only be used complete with its protective shield.
Reference number:
1016377 (super spot and spot), 1016378 (medium), 1016379 (flood), 1016380 (wide flood), 1016425 (warm dim).



LIGHT SOURCE - DO NOT TOUCH LED
Touching the LED can result in permanent damage of the light source. The light source and/or driver contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.



PREVENTING ELECTROSTATIC DAMAGE
A discharge of static electricity may damage sensitive components. Therefore do not touch the LED nor the stripped parts of the wires with bare hands. Always be properly insulated by using ESD gloves.

DRIVERS & ACCESSORIES

For latest version of driver matrix and available accessories check www.supermodular.com or connect with your sales contact.