

Smart Asy Lotis 48 LED DE


128900XX-B1_128901XX-B1_128902XX-B1

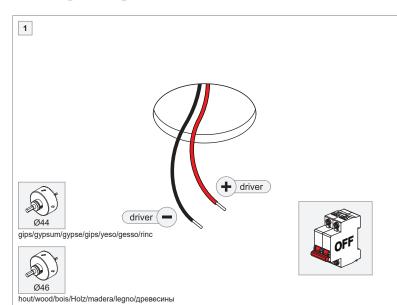

| ELECTRICAL SPECS LED-FIXTURE | | | |
|------------------------------|-----------------|----------|-------|
| Drive Current (mA) | Forward Voltage | | Power |
| | min (Vf) | max (Vf) | (W) |
| 350 | 2,7 | 3,3 | 1,00 |
| 500 | 2,7 | 3,3 | 1,45 |
| 1 RED | | BLACK | |
| | | | |


For serial connection, respect polarity! Not suited for connection to mains voltage. Combine with a Modular LED-driver.

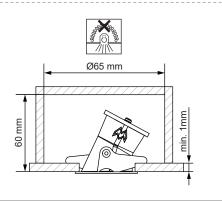


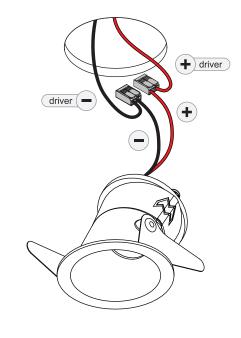


2



 

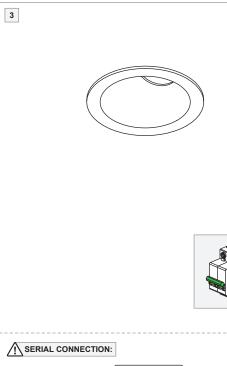

 

Always use a serial connection for multiple luminaires on a single driver! Only use luminaires with the same input ratings!



LIGHT SOURCE - DO NOT TOUCH LED

Touching the LED can result in permanent damage of the light source. The light source and/or driver contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.



PREVENTING ELECTROSTATIC DAMAGE

A discharge of static electricity may damage sensitive components. Therefore do not touch the LED nor the stripped parts of the wires with bare hands. Always be properly insulated by using ESD gloves.

DRIVERS & ACCESSORIES

For latest version of driver matrix and available accessories check www.supermodular.com or connect with your sales contact.













