


Passage Jack Adjustable 40 1x LED



139700XX_139701XX_139702XX_139703XX_139704XX_139705XX_139706XX_139707XX

1.1 INSTALLATION: COMPONENTS


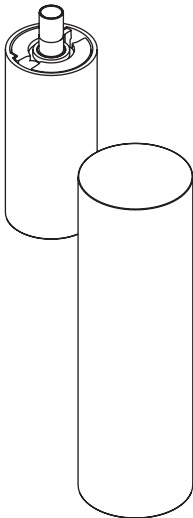


ELECTRICAL SPECS LED-FIXTURE			
Drive Current (mA)	Forward Voltage		Power (W)
	min (Vf)	max (Vf)	
350	11,2	13,2	4,1
500	11,2	13,2	6,1
700	11,2	13,2	9
 RED		 BLACK	
For serial connection, respect polarity! Not suited for connection to mains voltage. Combine with a Modular LED-driver.			



1.2 INSTALLATION: PLUG IN "MODUPOINT LED"

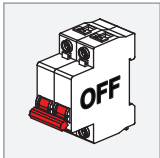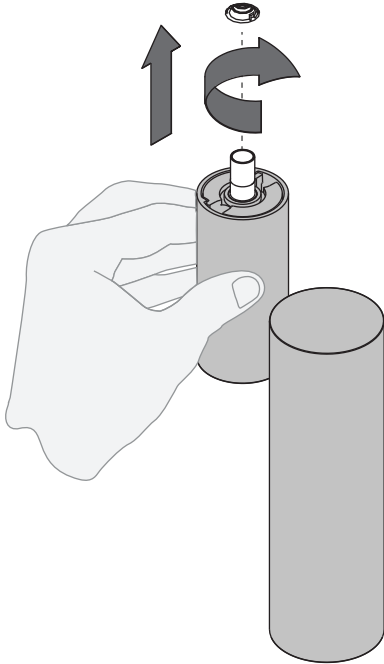


1.3 INSTALLATION: POWER ON

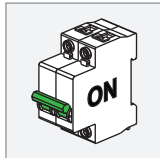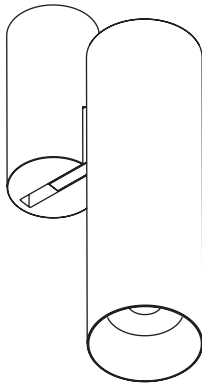

2.1 UNINSTALL

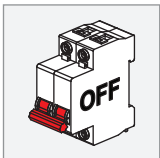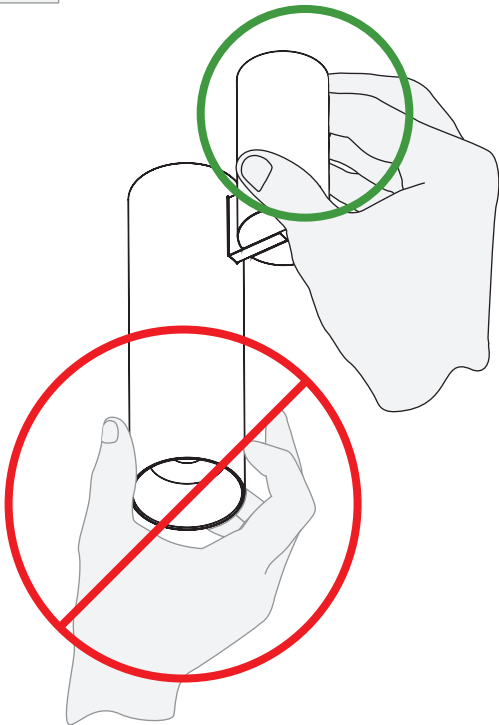

2.2 UNINSTALL

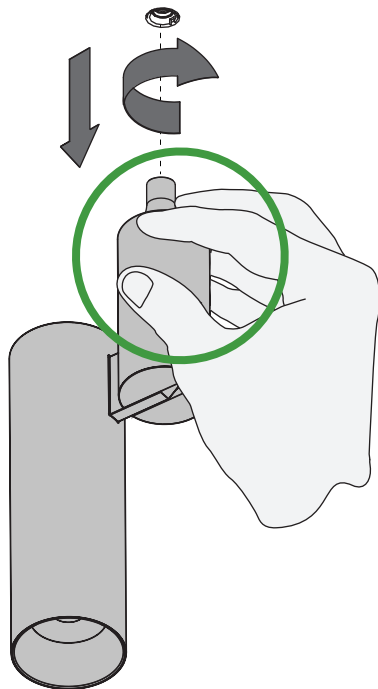

LIGHT SOURCE - DO NOT TOUCH LED

Touching the LED can result in permanent damage of the light source.
The light source and/or driver contained in this luminaire shall only be replaced
by the manufacturer or his service agent or a similar qualified person.

DRIVERS & ACCESSORIES

For latest version of driver matrix and available accessories check
www.supermodular.com or connect with your sales contact.