


Don't connect the gear to 230V before the LEDS are connected to the gear!

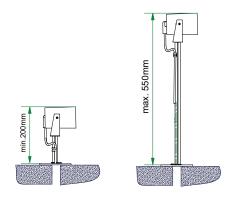

Drivers:

see driver matrix - latest version on website www.supermodular.com or check sales contact

NOT SUITABLE FOR INSTALLATION ≤5KM FROM THE COAST



The light source contained in this luminaire shall only be replaced by the manufacturer or his service ager or a similar qualified person











