





WARM DIM			
Drive Current (mA)	Forward Voltage		Power
	min (Vf)	max (Vf)	(W)
350	30,6	37	11,8
For serial connection, respect polarity!			
⊕ RED		BLACK	

## Minimum volume requirement - with driver

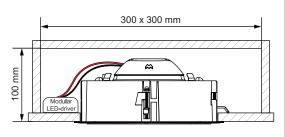

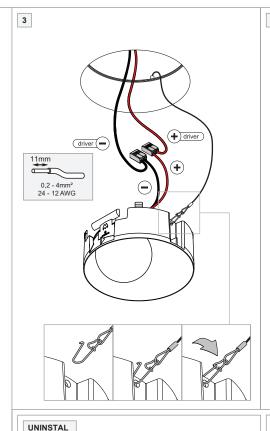

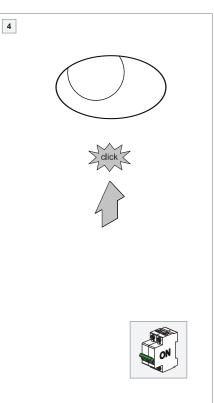

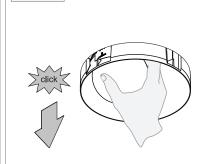



Replace protective shield when broken. The luminaire shall only be used complete with its protective shield. Reference number repair kit: 80000626



## LIGHT SOURCE - DO NOT TOUCH LED

Touching the LED can result in permanent damage of the light source. The light source and/ or driver contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.



## PREVENTING ELECTROSTATIC DAMAGE

A discharge of static electricity may damage sensitive components. Therefore do not touch the LED nor the stripped parts of the wires with bare hands. Always be properly insulated by using ESD gloves.



For latest version of driver matrix and available accessories check www.supermodular.com or connect with your sales contact.

















