


Smart Lotis 160 IP GE

130140XX_130141XX_130142XX_130143XX_130144XX_130145XX_130146XX_130147XX_130148XX_130150XX_130151XX_130152XX130160XX_130161XX_130162XX

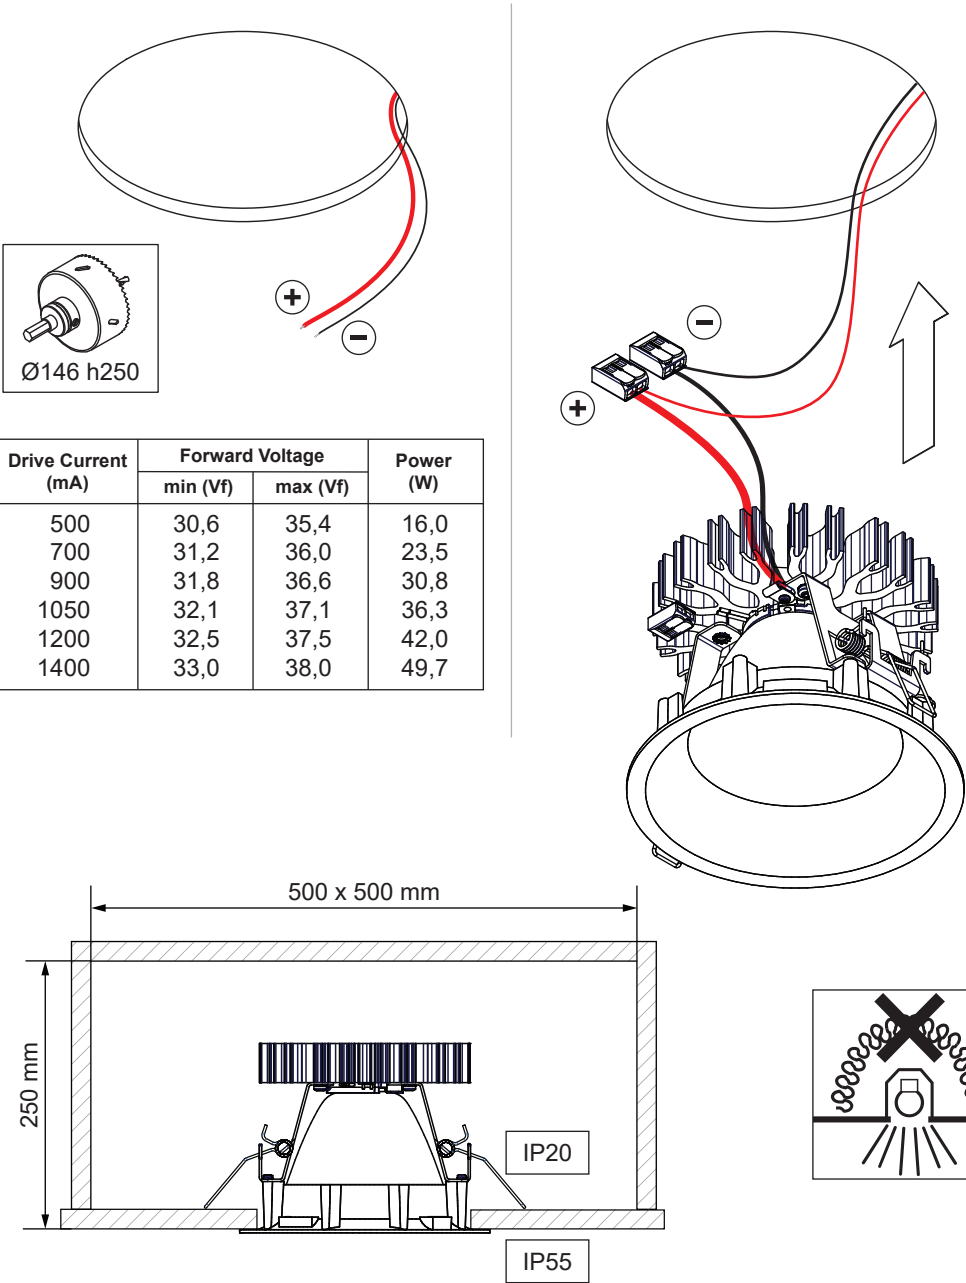

Drive Current (mA)	Forward Voltage		Power (W)
	min (Vf)	max (Vf)	
500	30,6	35,4	16,0
700	31,2	36,0	23,5
900	31,8	36,6	30,8
1050	32,1	37,1	36,3
1200	32,5	37,5	42,0
1400	33,0	38,0	49,7

CHECK DIP-SWITCHES ON DRIVER
ON
OFF 1 2 3 4 5 6

check dipswitch settings on driver
Push Dim max 5 drivers on 1 push button

Replace protective shield when broken. The luminaire shall only be used complete with its protective shield.
Reference number: 1012649 or 1011467 (diff)

LIGHT SOURCE - DO NOT TOUCH LED
Touching the LED can result in permanent damage of the light source. The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.

PREVENTING ELECTROSTATIC DAMAGE
A discharge of static electricity may damage sensitive components. Always be properly grounded when touching leads or circuitry inside the luminaire. Use a wrist strap connected by a ground cord to the housing. Avoid touching the light sources with bare hands.

DRIVERS & ACCESSORIES
For latest version of driver matrix and available accessories check www.supermodular.com or connect with your sales contact.

CAN BE USED WITH

Mask:
13040009 Smart Mask 160 Whstr
13040032 Smart Mask 160 Blstr