


SLD35

INSTALLATION INSTRUCTIONS

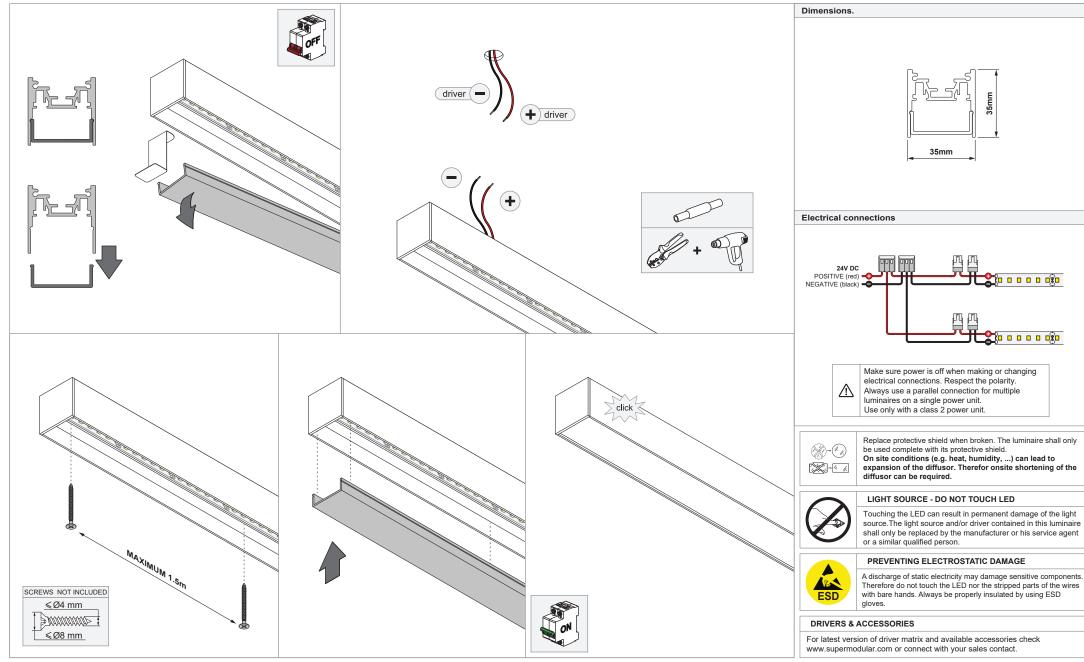

















SLD35 suspended mounted

93460005_93460006_93460017_93460018_93460905_93460932_93470506

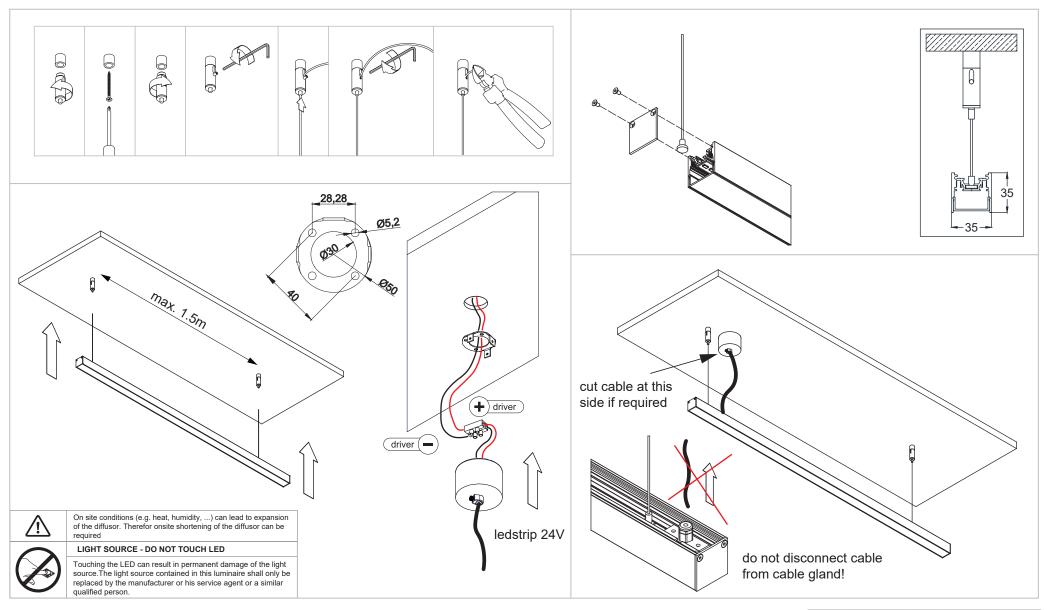



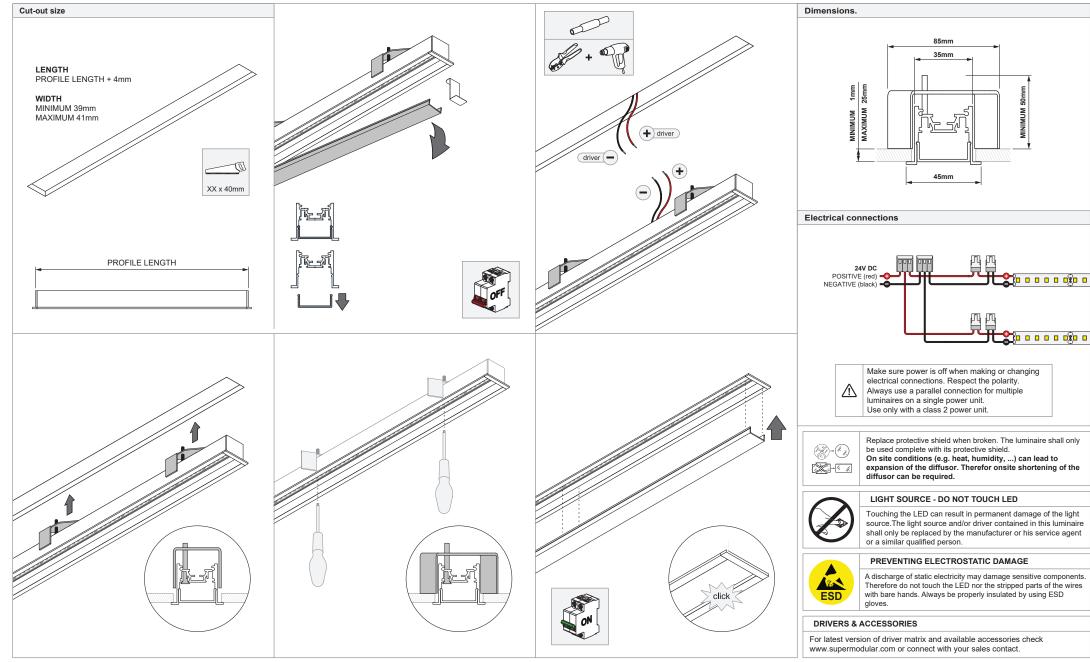














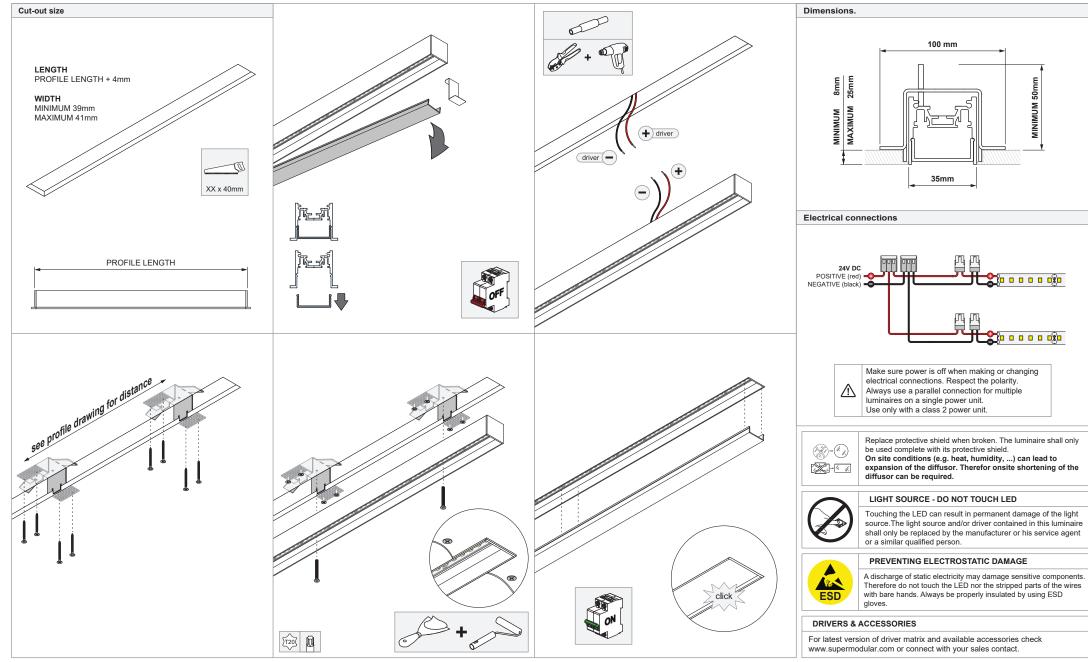















93460050 - 93460060

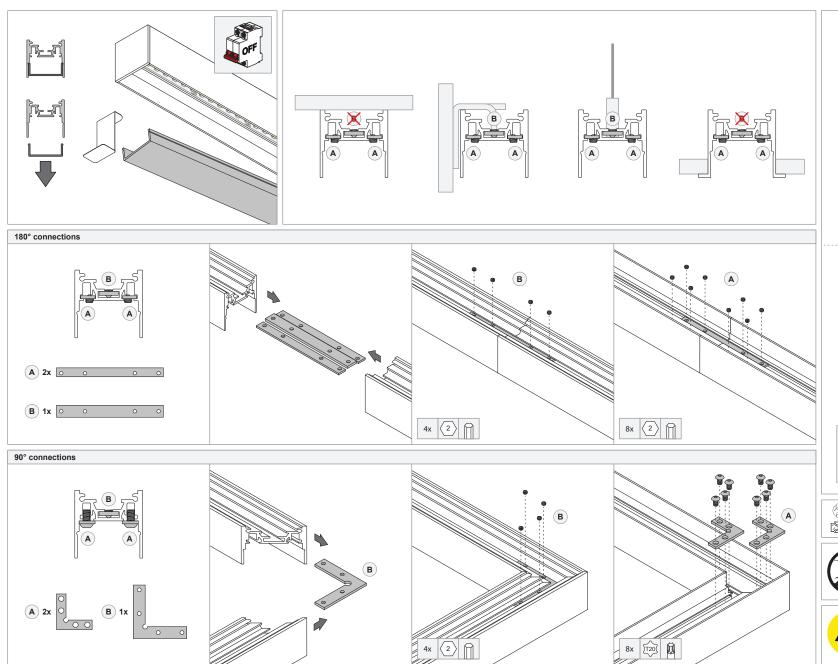

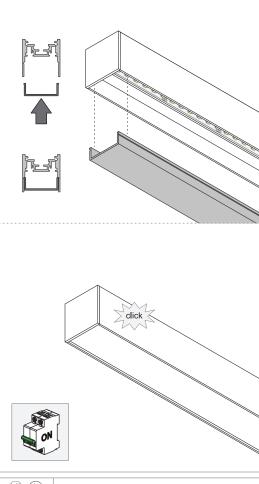



Replace protective shield when broken. The luminaire shall only be used complete with its protective shield.



LIGHT SOURCE - DO NOT TOUCH LED

Touching the LED can result in permanent damage of the light source. The light source and/or driver contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.



PREVENTING ELECTROSTATIC DAMAGE

A discharge of static electricity may damage sensitive components. Therefore do not touch the LED nor the stripped parts of the wires with bare hands. Always be properly insulated by using ESD gloves.










SLD35 lateral wall bracket

SLD35 LEDSTRIP 24V connection wall

93470504

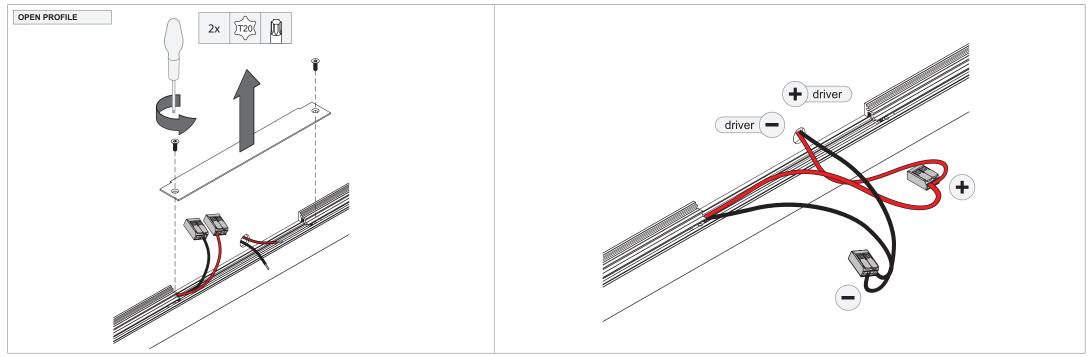

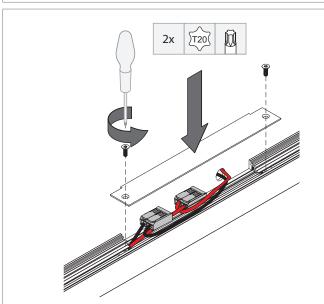

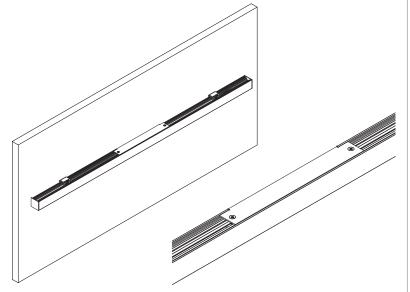



On site conditions (e.g. heat, humidity, \dots) can lead to expansion of the diffusor. Therefor onsite shortening of the diffusor can be required



Replace protective shield when broken. The luminaire shall only be used complete with its protective shield.
Reference number: SLD50 Poly In (1012155) SLD50 Prismatic (1012157) - SLD50 Poly Out (1012157)



LIGHT SOURCE - DO NOT TOUCH LED

Touching the LED can result in permanent damage of the light source. The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.



PREVENTING ELECTROSTATIC DAMAGE

A discharge of static electricity may damage sensitive components. Therefore do not touch the LED nor the stripped parts of the wires with bare hands. Always be properly insulated by using ESD

















