


# SLD75

INSTALLATION INSTRUCTIONS



## SLD75 - general installation manual


93550007\_93550009\_93550032

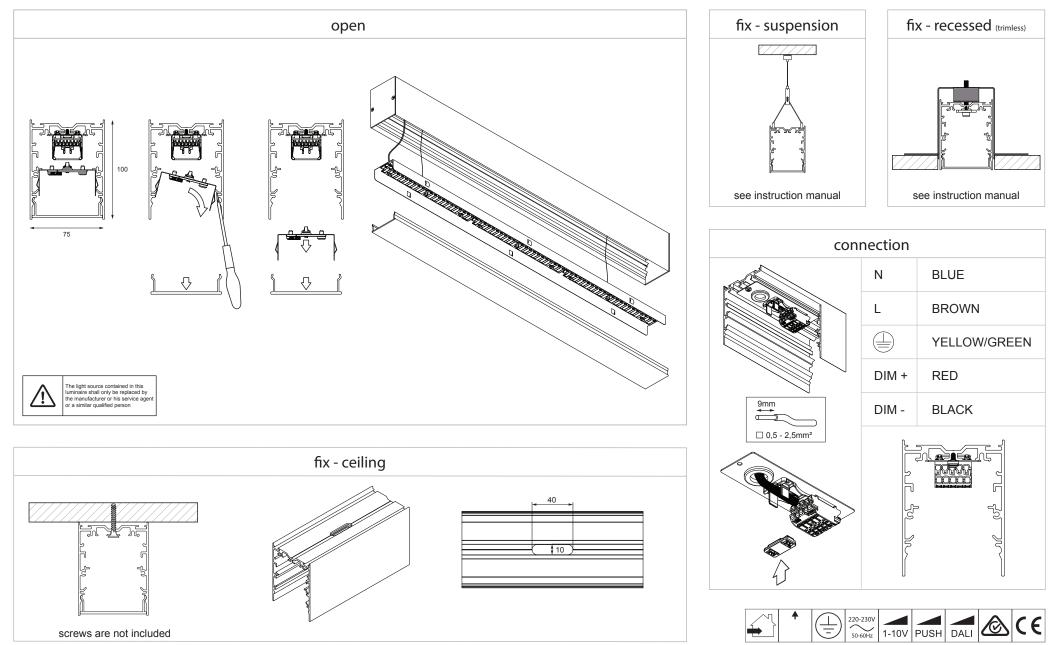

V0 - 20/11/2015

## SLD75 flange - general installation manual


93552004\_93552009\_93552032

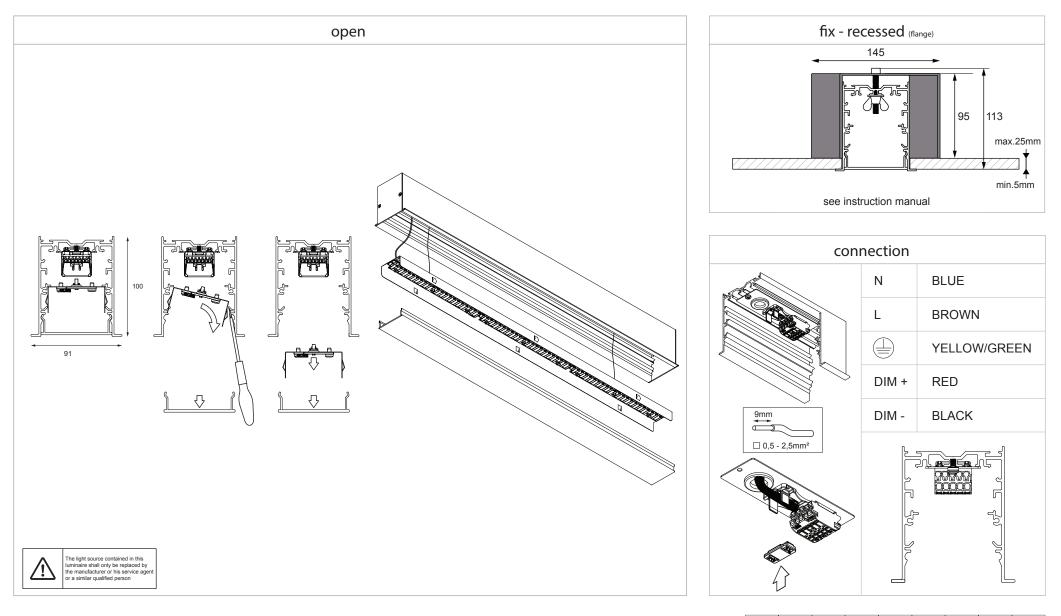

1-10V PUSH DALI


## SLD75 connection 180°

93550050

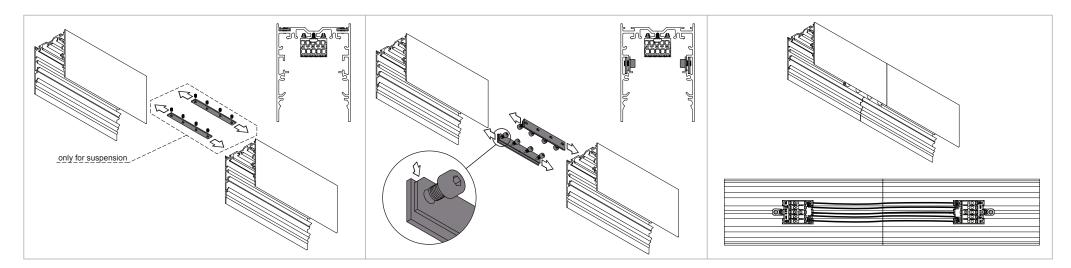

## SLD75 connection 90°


93550060

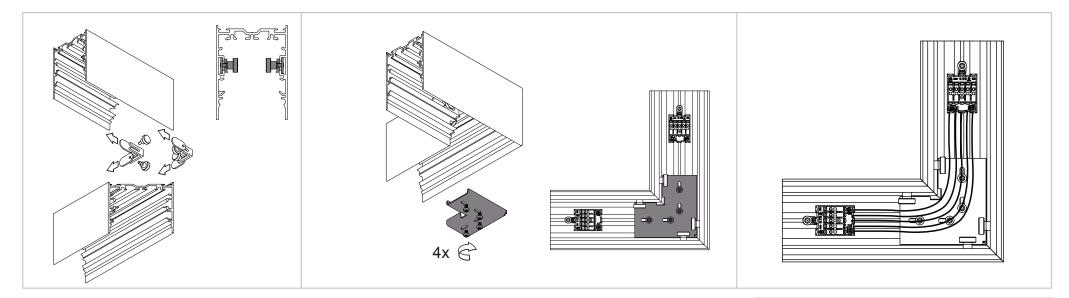




## SLD75 endplate incl. inner flange

93550181\_93550881\_93550982

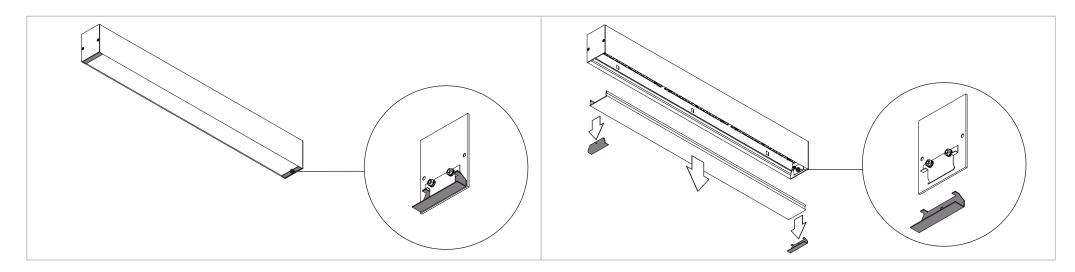

## SLD75 endplate excl. inner flange


93550183\_93550883\_93550983

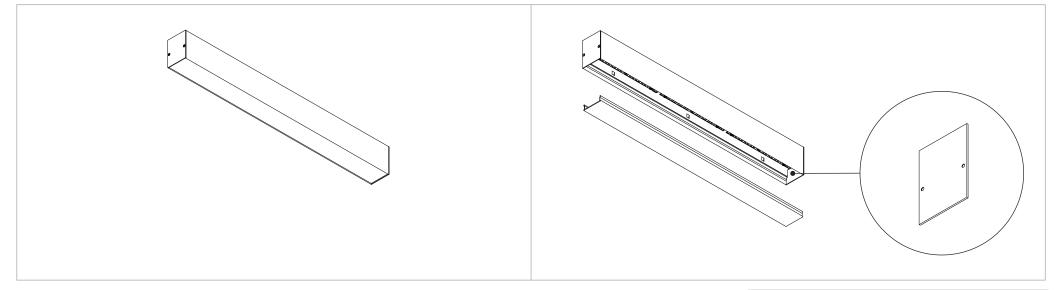




## SLD75 flange endplate incl. inner flange

93552182\_93552881\_93552982

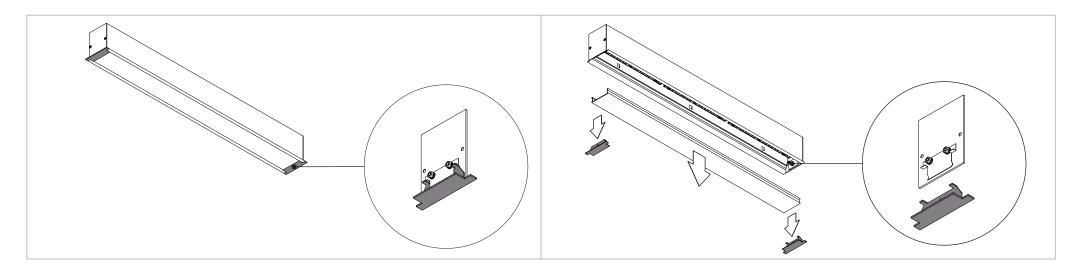

# SLD75 flange endplate excl. inner flange


93552184\_93552883\_93552983

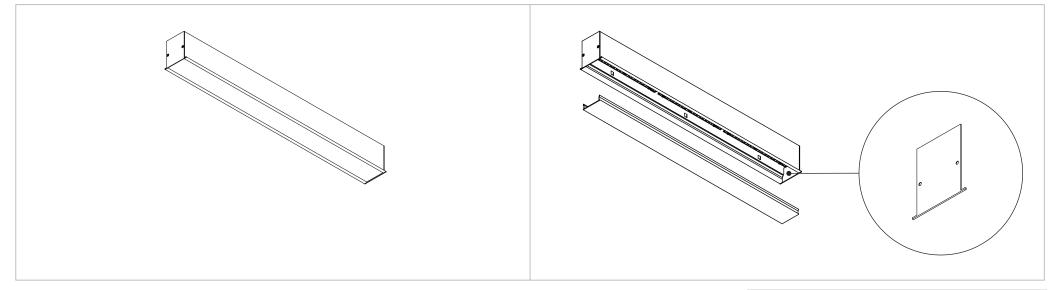




## SLD75 twin suspension

93550145\_93550845\_93550945

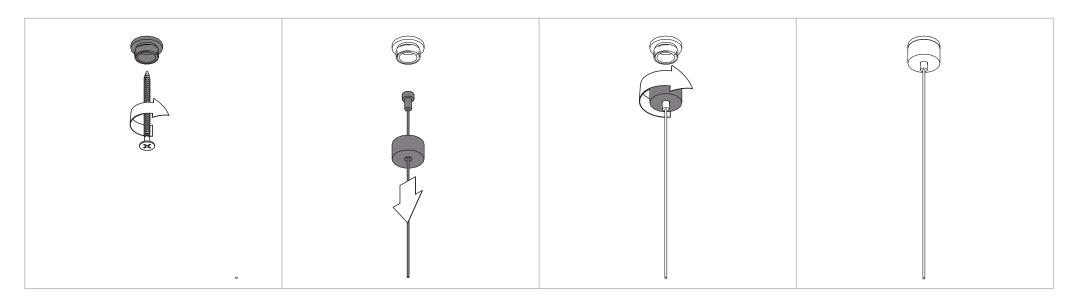

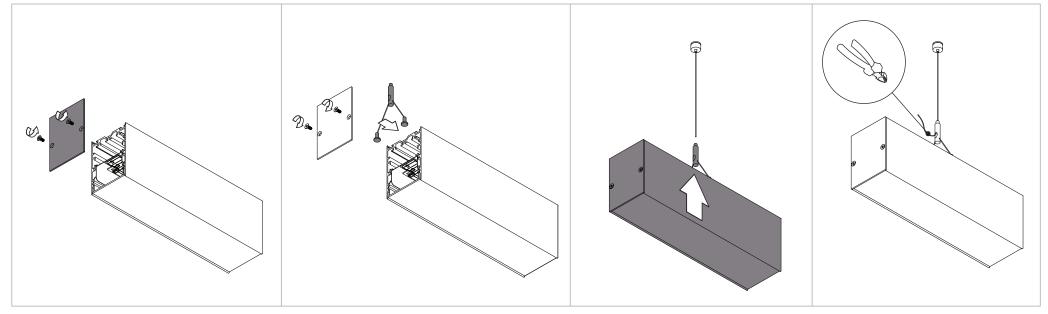




V0 - 20/11/2015

## SLD75 suspension bracket


93550999

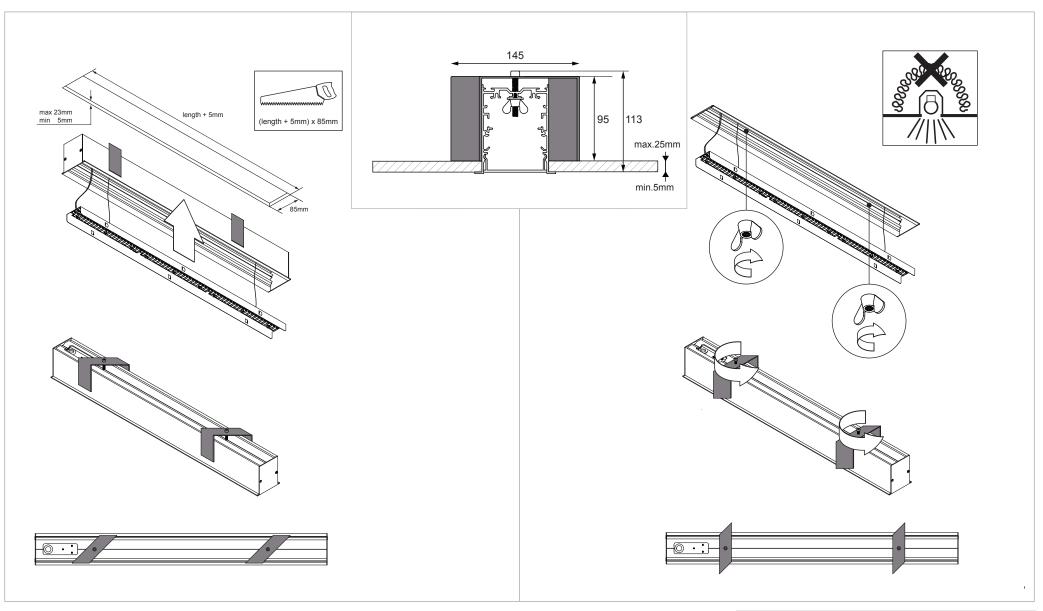



#### SLD75 recessed bracket trimless

93550997

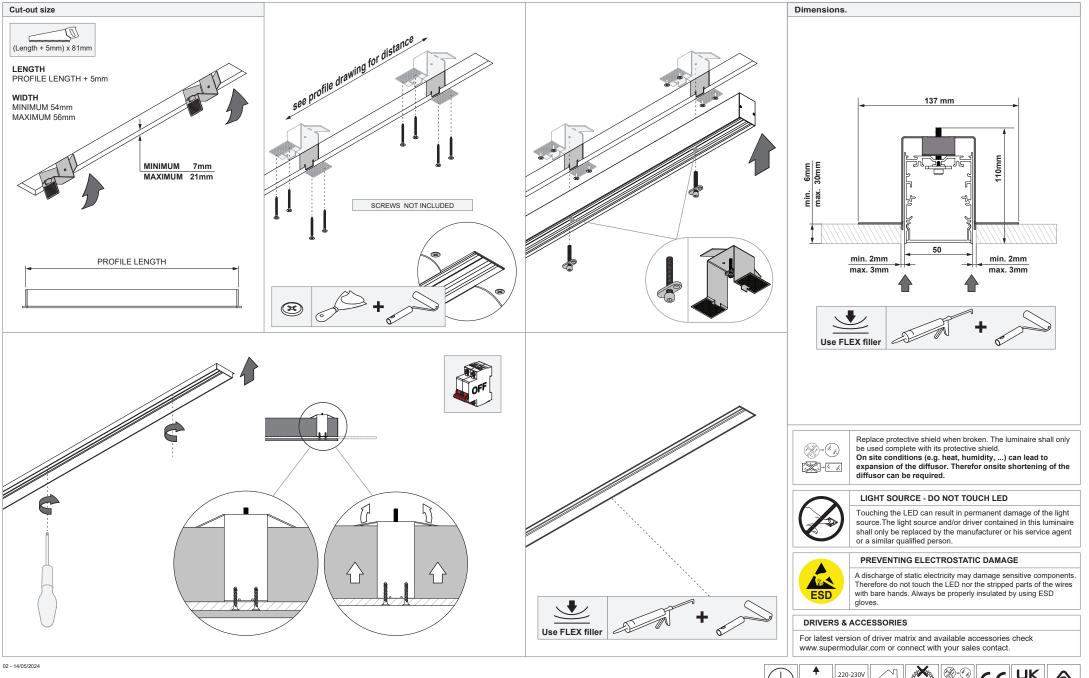

\_

50-60Hz