



SLD50 NAKED

INSTALLATION INSTRUCTIONS

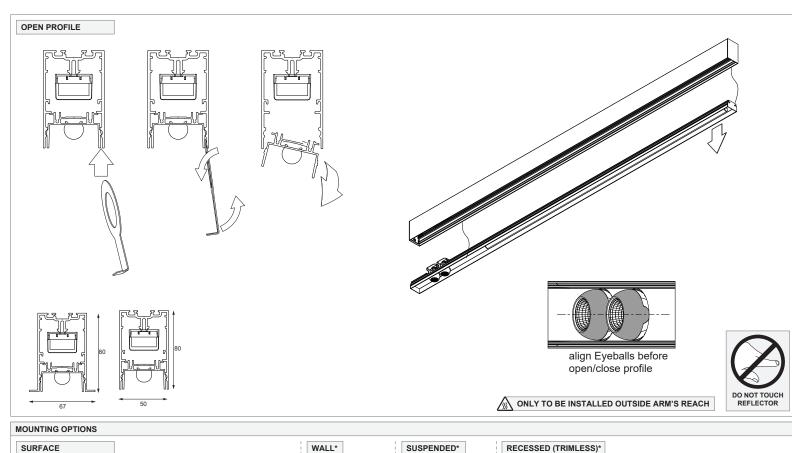

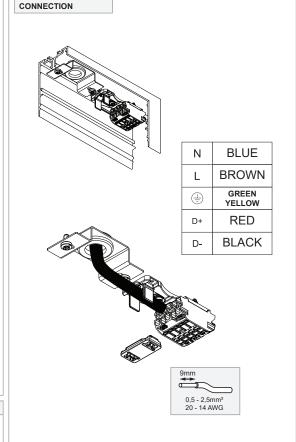





On site conditions (e.g. heat, humidity, ...) can lead to expansion of the diffusor. Therefor onsite shortening of the diffusor can be required



Replace protective shield when broken. The luminaire shall only be used complete with its protective shield. Reference number: 1XXXXXX



LIGHT SOURCE - DO NOT TOUCH LED

Touching the LED can result in permanent damage of the light source. The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.



PREVENTING ELECTROSTATIC DAMAGE

A discharge of static electricity may damage sensitive components. Therefore do not touch the LED nor the stripped parts of the wires with bare hands. Always be properly insulated by using ESD



* SEE INSTRUCTION MANUALS




















SCREWS ARE

93568000_93581000

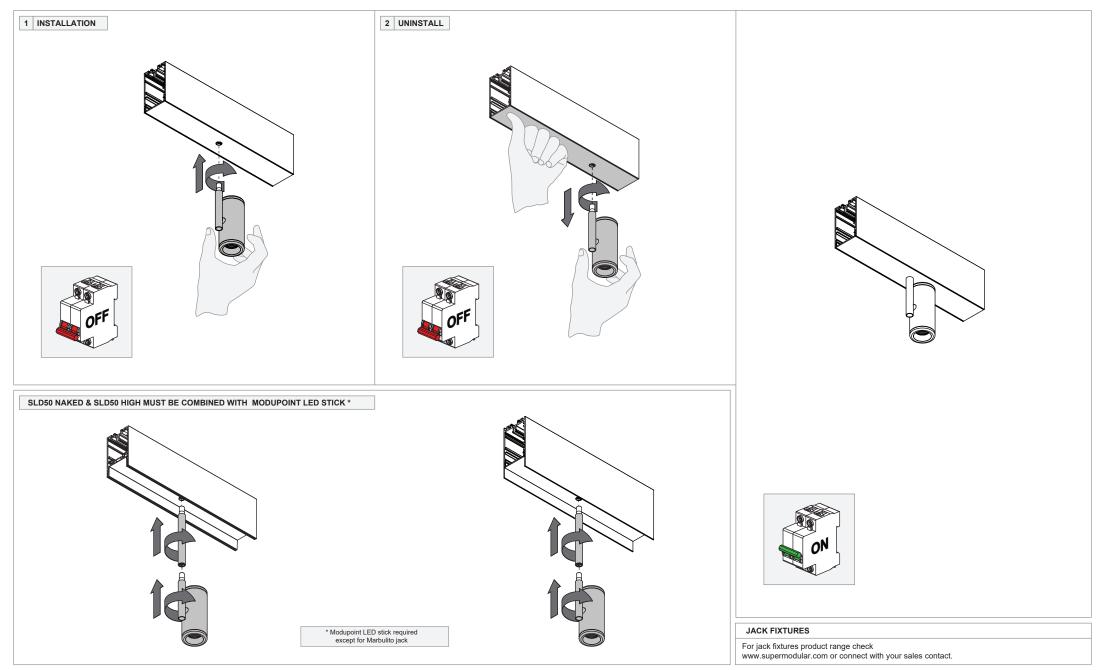













SLD50/SLD50H Connection 180° (Suspended)


93560063 93560065-B1

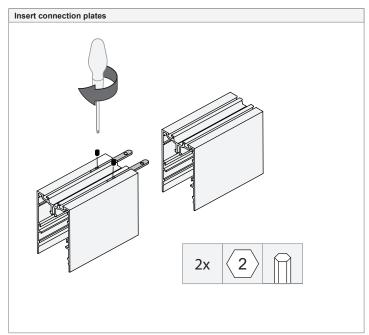


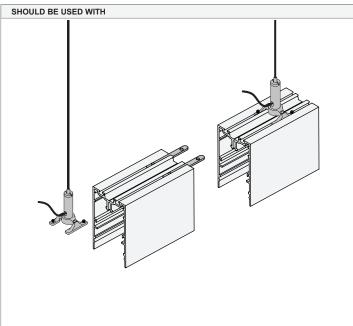

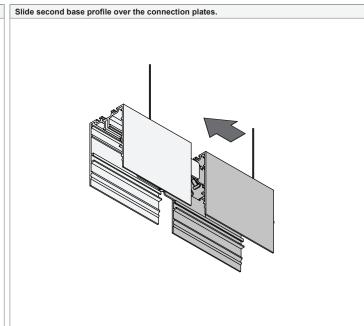

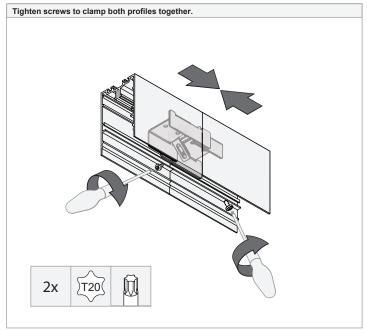

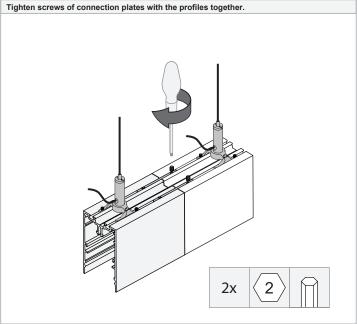

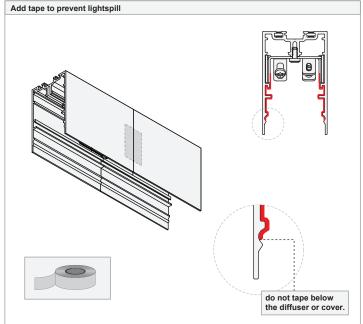















SLD50/SLD50H Connection 180° (Surface)


93560063_93560065-B2

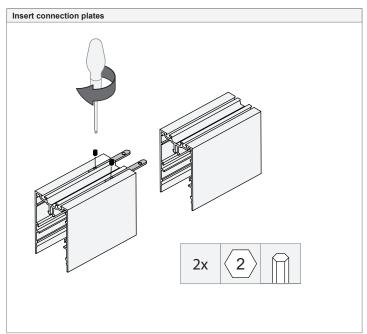


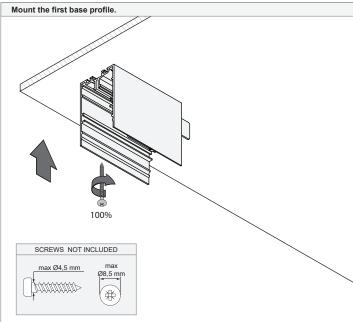

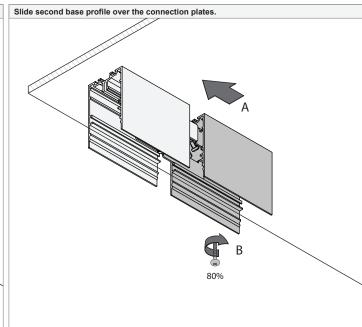

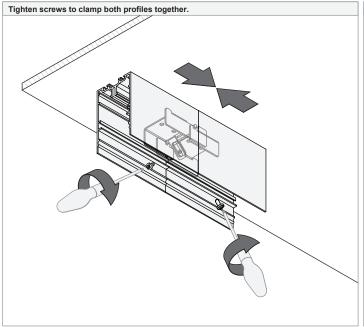

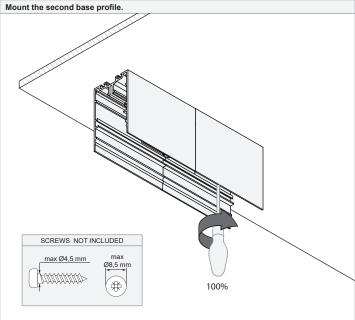


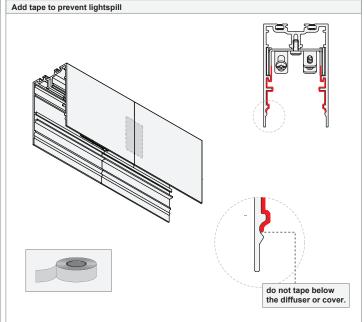




SLD50/SLD50H Connection 180° (For Recessed Mounting) 3-5P

93560066

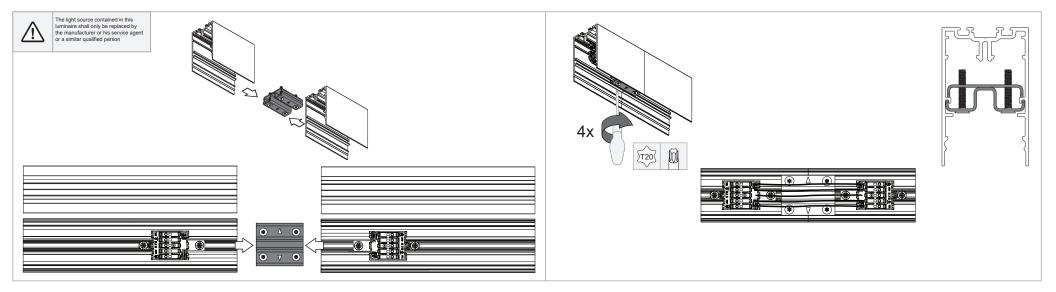

SLD50/SLD50H Connection 180° (For Recessed Mounting) 6-9P


93560067

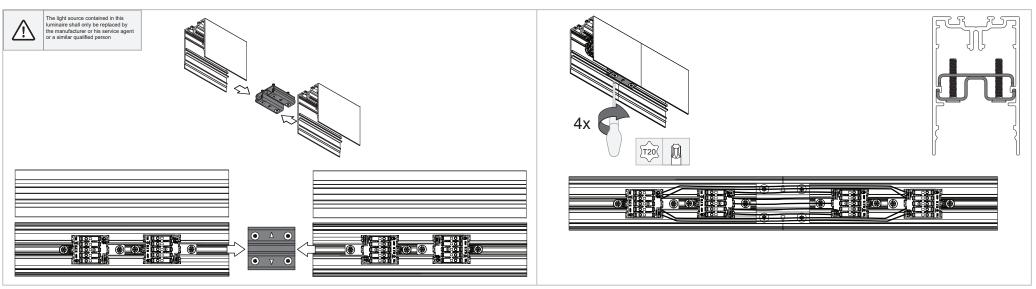




SLD50/SLD50H Connection 90° (Suspended)

93560053_93560059-B1

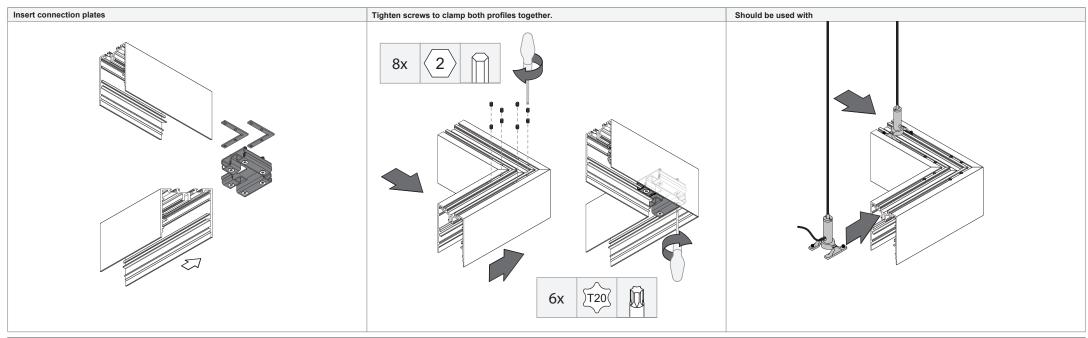


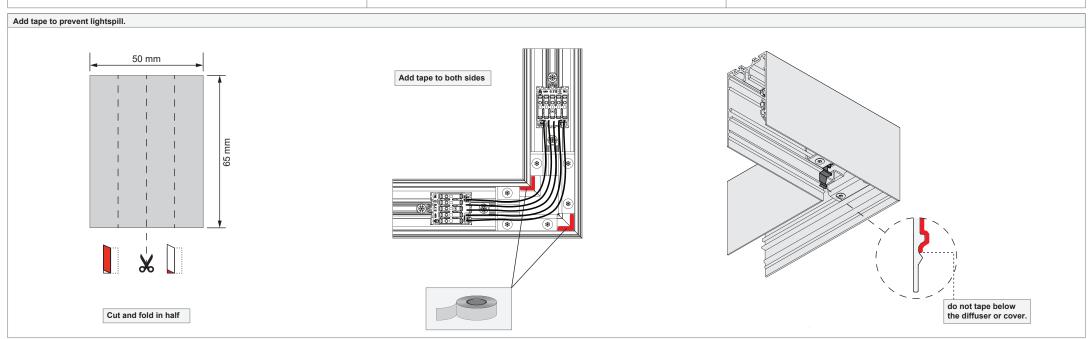




SLD50/SLD50H Connection 90° (Surface)


93560053_93560059-B2

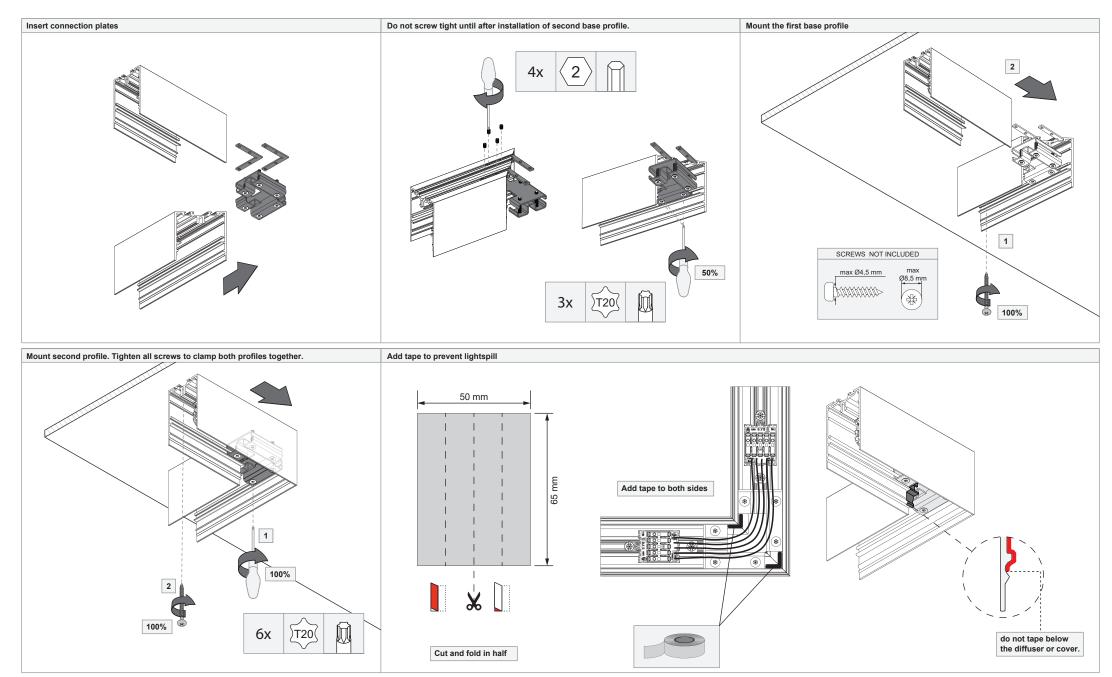

SLD50 recessed bracket trimless

93590056

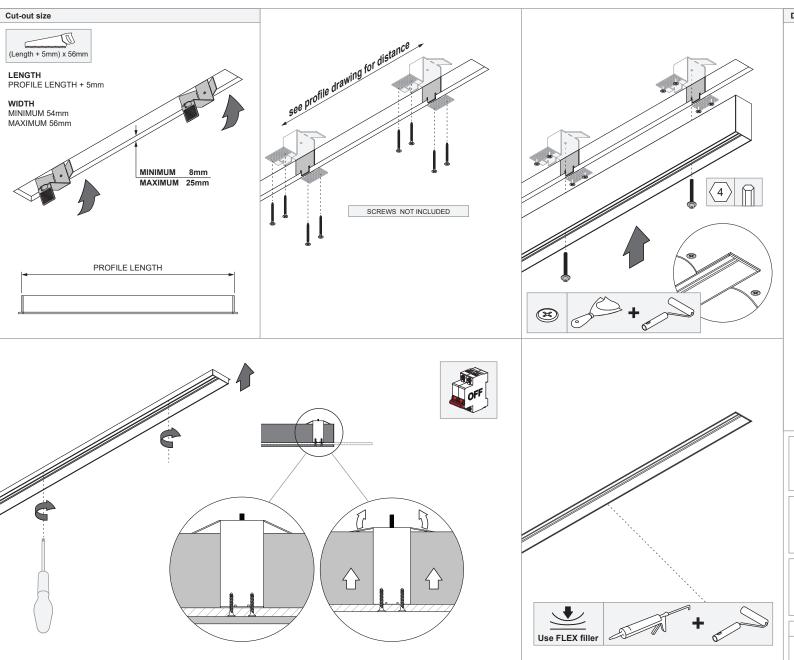

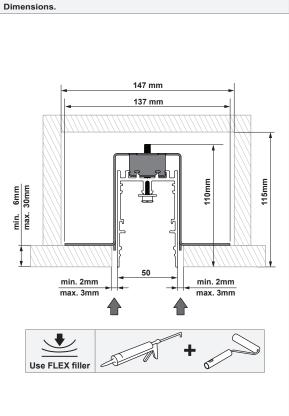



Replace protective shield when broken. The luminaire shall only be used complete with its protective shield.

On site conditions (e.g. heat, humidity, ...) can lead to expansion of the diffusor. Therefor onsite shortening of the diffusor can be required.



LIGHT SOURCE - DO NOT TOUCH LED

Touching the LED can result in permanent damage of the light source. The light source and/or driver contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.



PREVENTING ELECTROSTATIC DAMAGE

A discharge of static electricity may damage sensitive components. Therefore do not touch the LED nor the stripped parts of the wires with bare hands. Always be properly insulated by using ESD gloves.

DRIVERS & ACCESSORIES

For latest version of driver matrix and available accessories check www.supermodular.com or connect with your sales contact.
















SLD50 recessed bracket


93560057

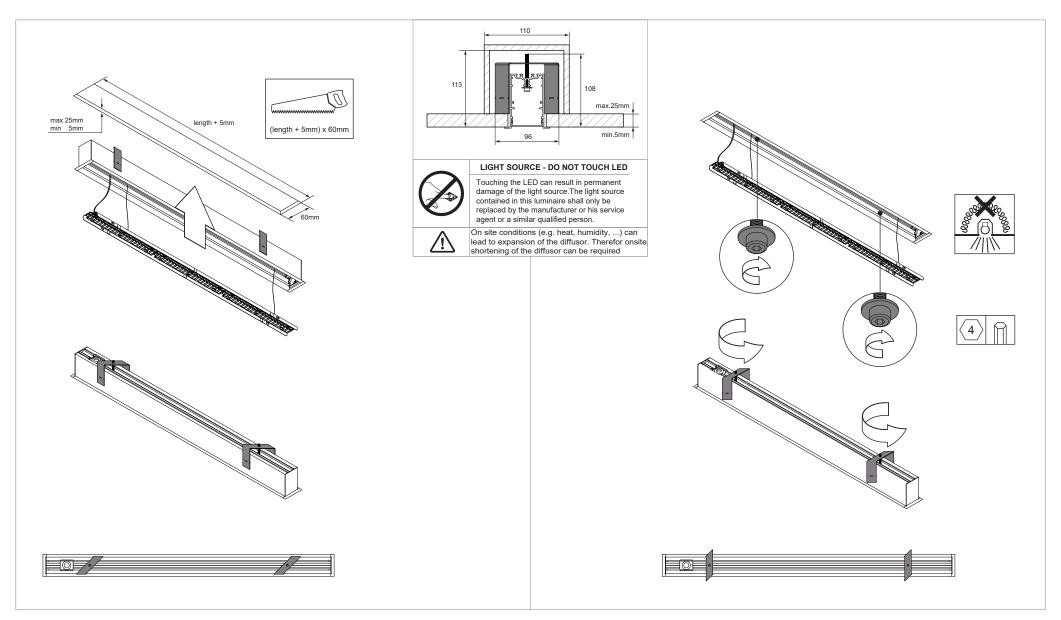



SLD50 lateral wall brack

93560705_93560709_93560732

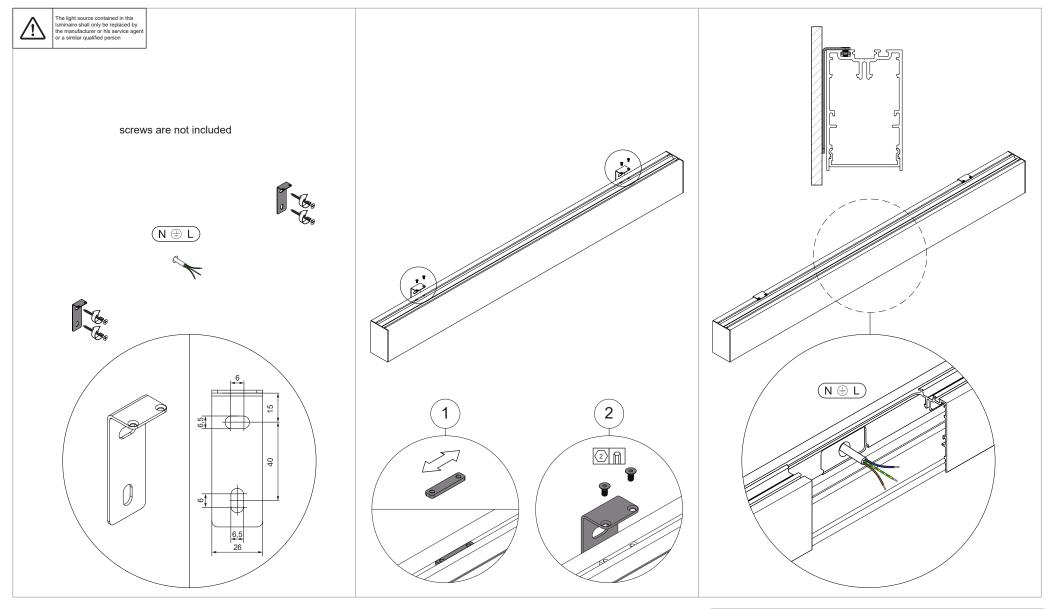



SLD50 suspension

93560805_93560809_93560832

