
## Qbini trimless frame (install modules)

141800XX 141801XX 141802XX 141803XX

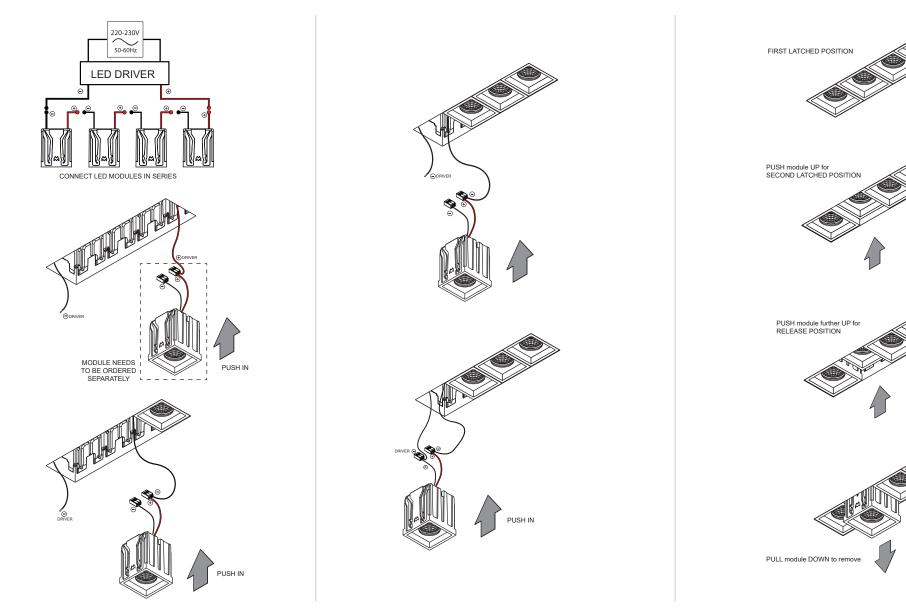



(A)

B

 $\bigcirc$ 

 $\bigcirc$