



Power Feed and Suspension Canopy Recessed Round 2P Extruded Stripped DE

137910XX


1 CHECK DIMENSIONS & PREPARE HOLE

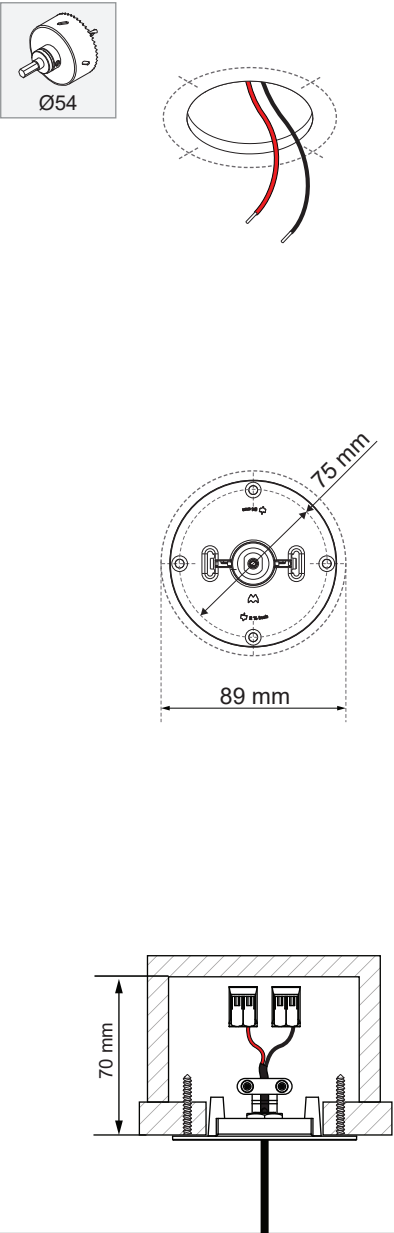


2 SHORTEN CABLE AND FIXATE STRAIN RELIEF

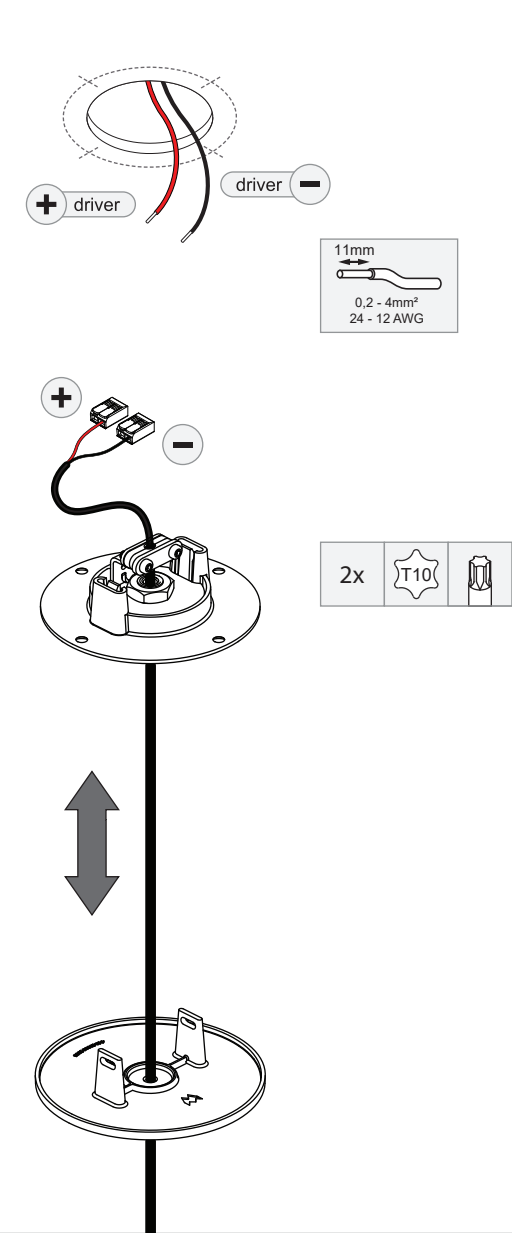

3 MAKE ELECTRICAL CONNECTION & MOUNT

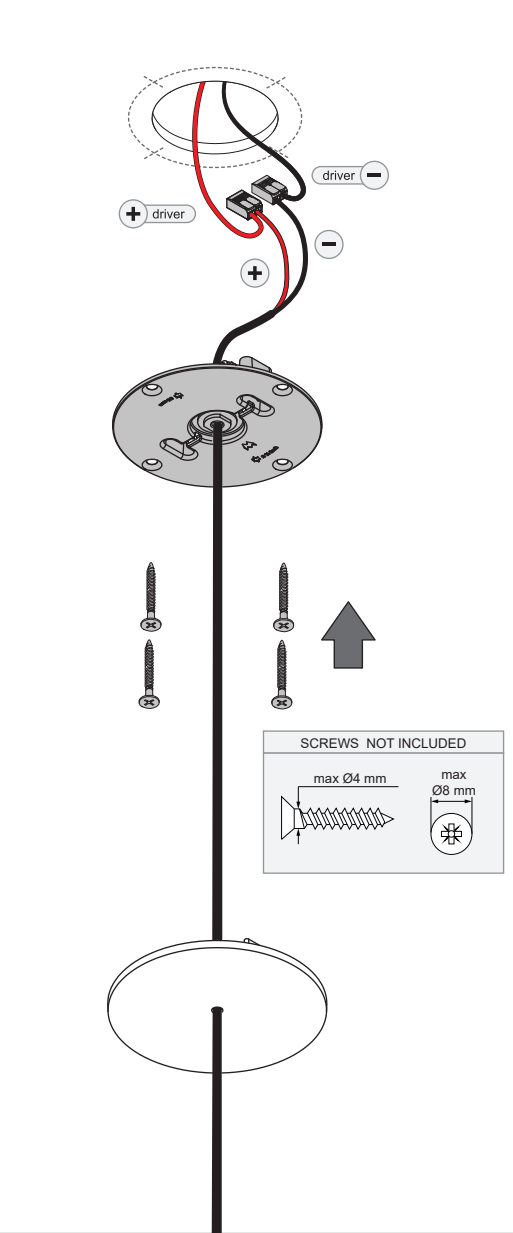

4 SLIDE OVER COVER

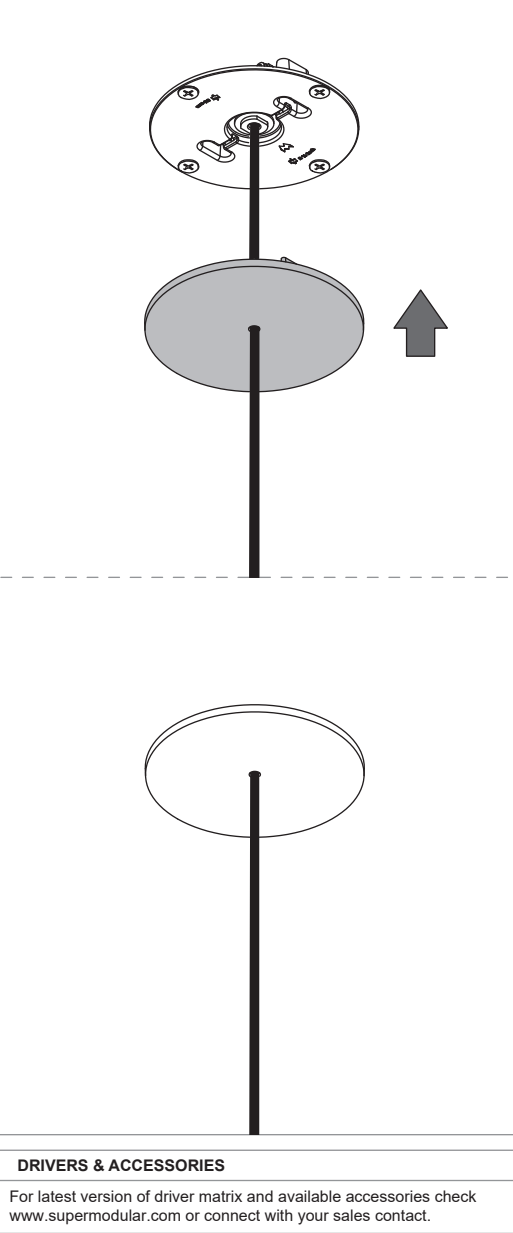

DRIVERS & ACCESSORIES

For latest version of driver matrix and available accessories check [www.supermodular.com](http://www.supermodular.com) or connect with your sales contact.