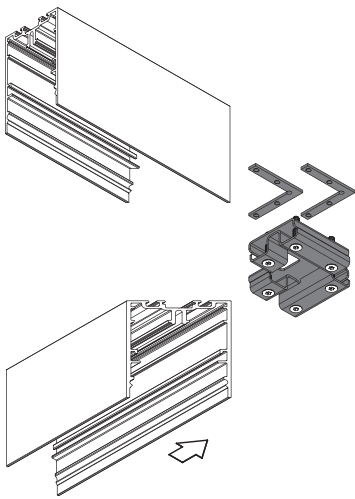
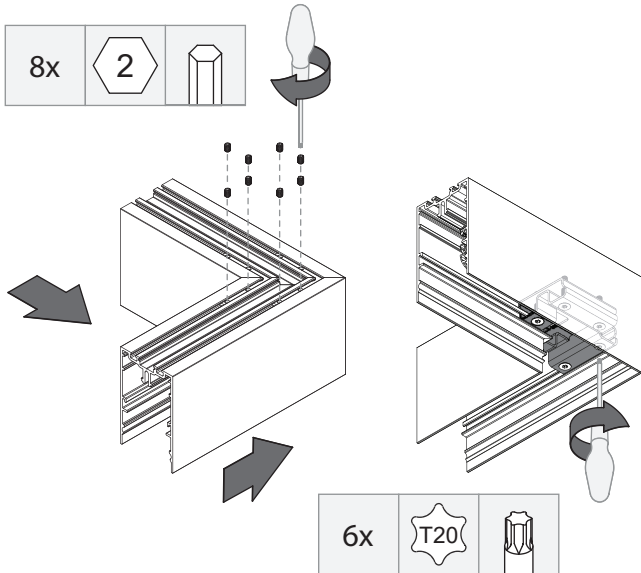
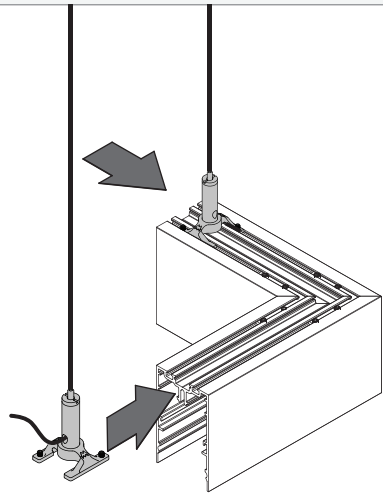
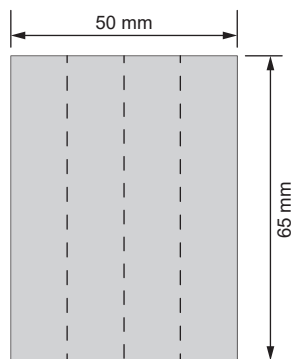



SLD50/SLD50H Connection 90° (Suspended)

93560053_93560059-B1

Insert connection plates	Tighten screws to clamp both profiles together.	Should be used with
		


Add tape to prevent lightspill.


A rectangular piece of tape with a width of 50 mm and a height of 65 mm. Two vertical dashed lines are shown, dividing the tape into three equal sections. The dimensions are indicated by arrows and text labels.


A sequence of three small diagrams showing the process of cutting the tape in half with scissors and then folding it in half lengthwise.

Cut and fold in half

Add tape to both sides

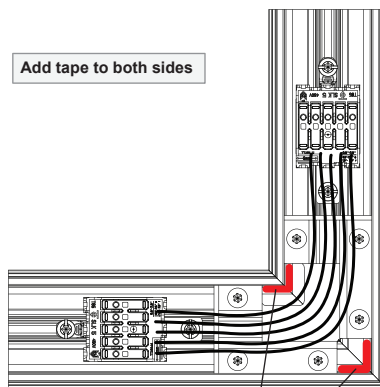A diagram showing the tape being applied to both sides of a connection. The tape is shown being applied to the sides of the connection plates, with red arrows indicating the direction of application.

A diagram showing a roll of tape with a red arrow indicating the direction of application.

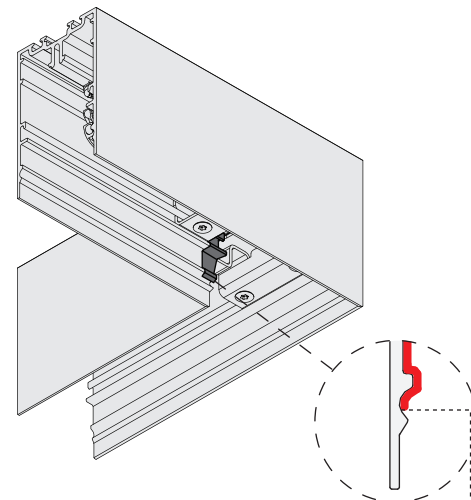A diagram showing the tape being applied to the connection. The tape is shown being applied to the sides of the connection plates, with red arrows indicating the direction of application. A circular inset shows a close-up of the tape being applied to the connection.

do not tape below
the diffuser or cover.