



Plaster Kit Recessed Trimless 70 150x150

12293630


11624030 Conbox 140x250x100x210 - NOT INCLUDED

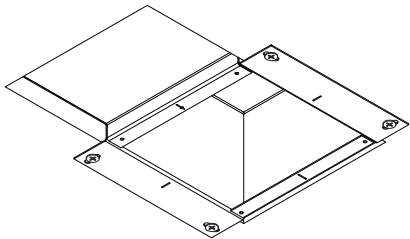

12293630 Plaster Kit Rec Trimless 70 150x150 - INCLUDED

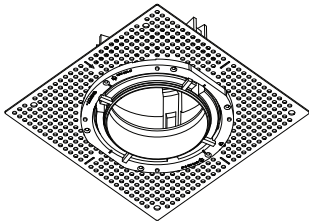


1

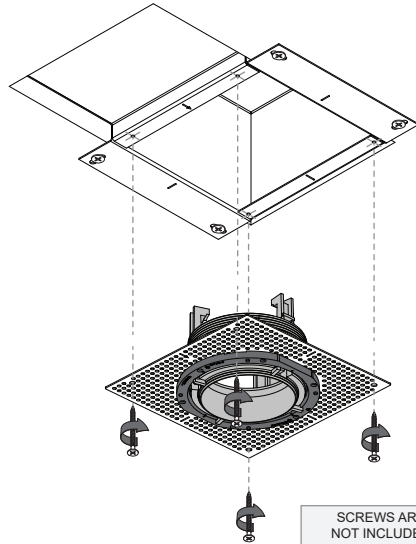


SCREWS ARE NOT INCLUDED


2

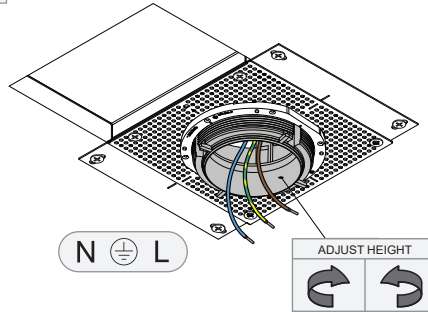


CHECK BEFORE PLASTER FINISHING

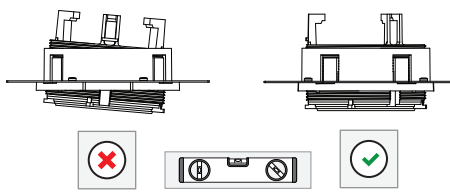

3

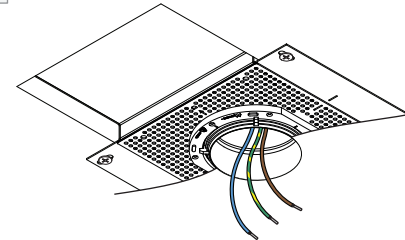

REINFORCE PLASTERFINISH WITH FIBREGLASS JOINT COVER TO AVOID CRACKS

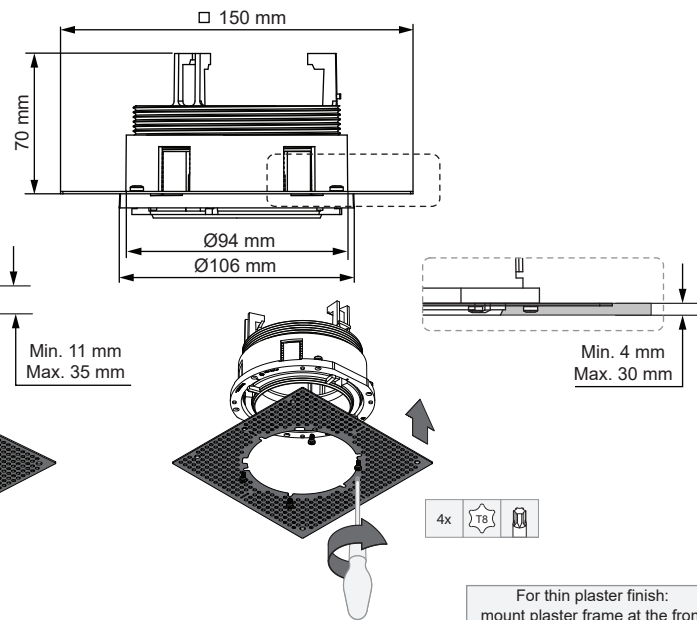

DRIVER CAN ALSO BE INSERTED AFTERWARDS

