COMO CORNER

MODULAR
LIGHTING —
INSTRUMENTS

COMO CORNER

LED strip
mounting areas

Curved

Straight

LED strip options:

US_93000032 (2700K) (1000lm/m) (3m)
US_93000033 (3000K) (1000lm/m) (3m)
US_93000034 (3500K) (1000lm/m) (3m)
US_93000016 (2700K) (1000lm/m) (5m)
US_93000017 (3000K) (1000lm/m) (5m)
US_93000018 (3500K) (1000lm/m) (5m)
US_93000035 (2700K) (2000lm/m) (3m)
US_93000036 (3000K) (2000lm/m) (3m)
US_93000037 (3500K) (2000lm/m) (3m)
US_93000026 (2700K) (2000lm/m) (5m)
US_93000027 (3000K) (2000lm/m) (5m)
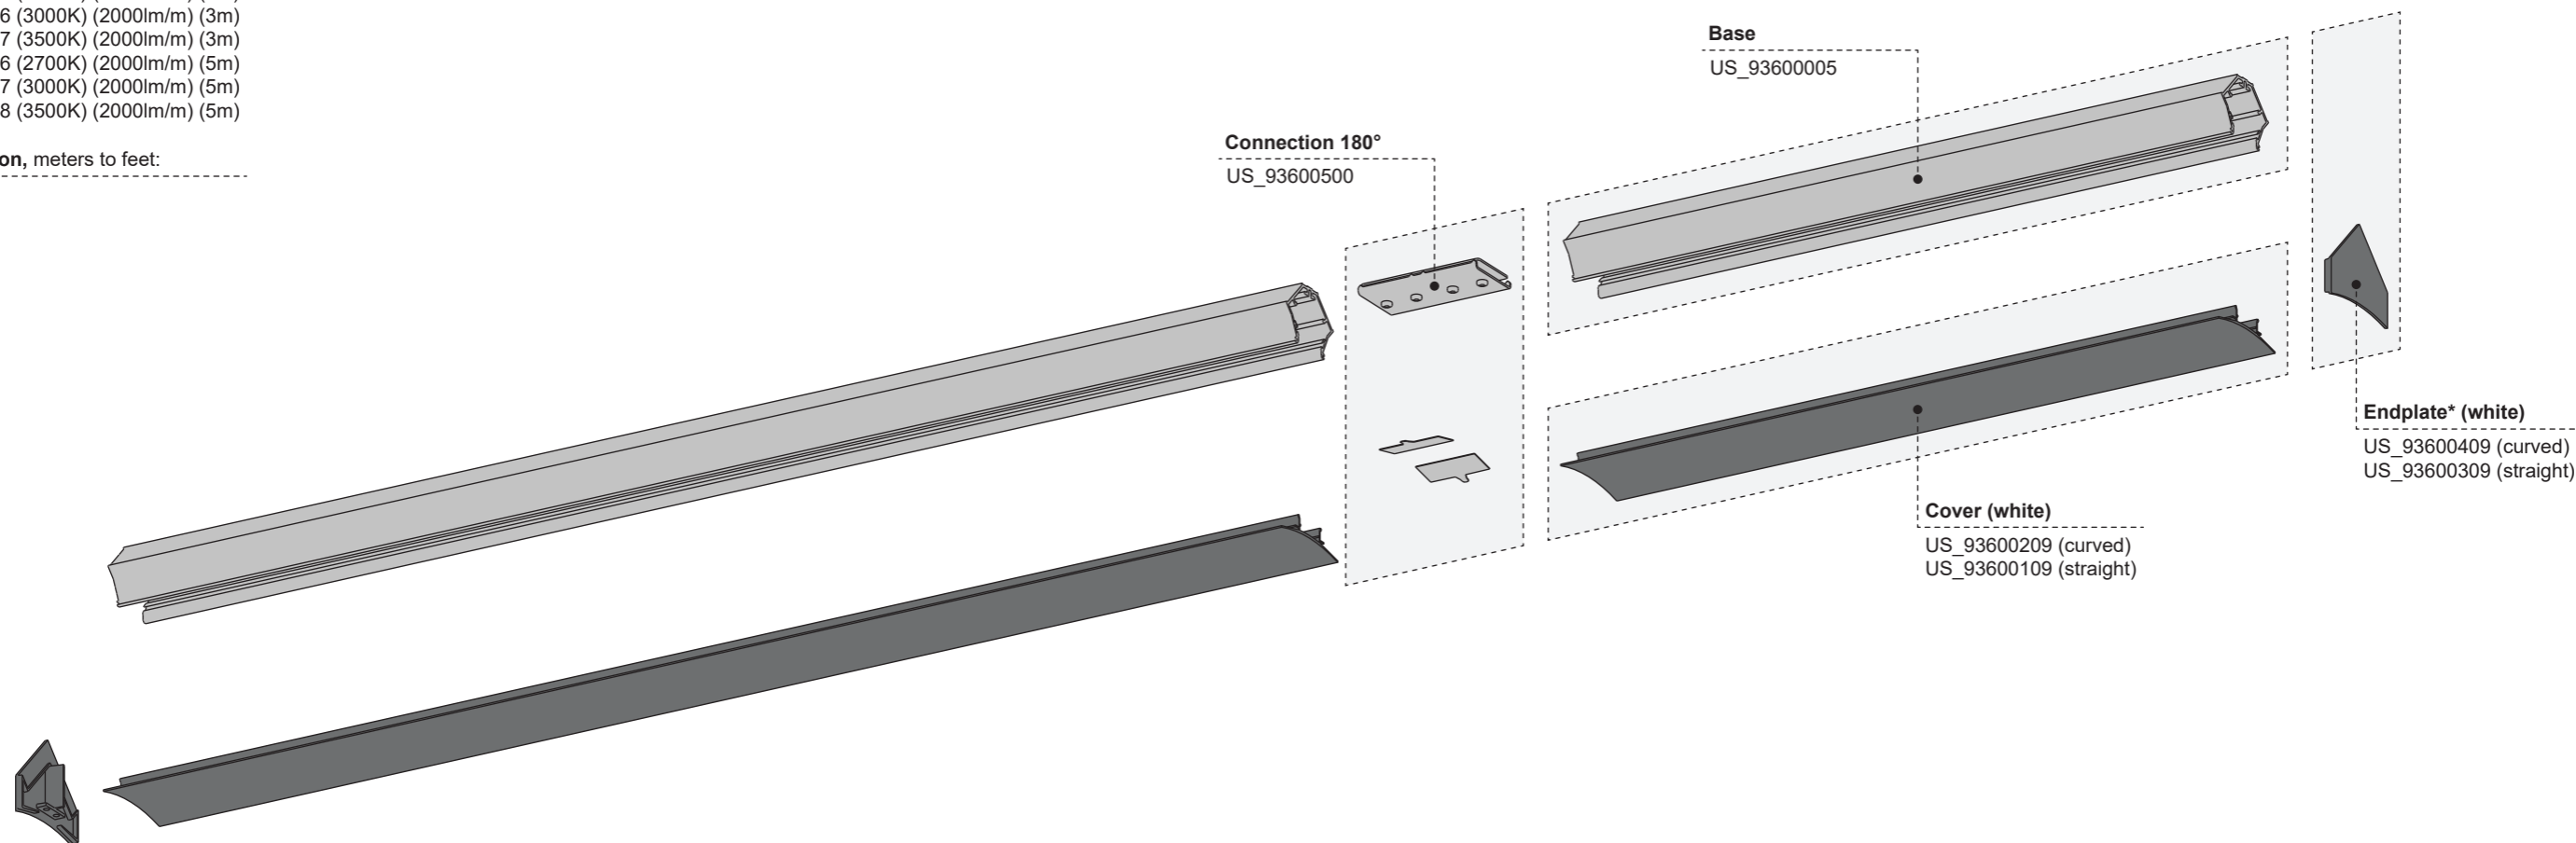US_93000028 (3500K) (2000lm/m) (5m)

Curved design, choose:
- **Curved** covers
- **Curved** endplates

Straight design, choose:
- **Straight** covers
- **Straight** endplates

For conversion, meters to feet:

1m = 3.28ft

Base
US_93600005

Connection 180°
US_93600500

Endplate* (white)
US_93600409 (curved)
US_93600309 (straight)

Cover (white)
US_93600209 (curved)
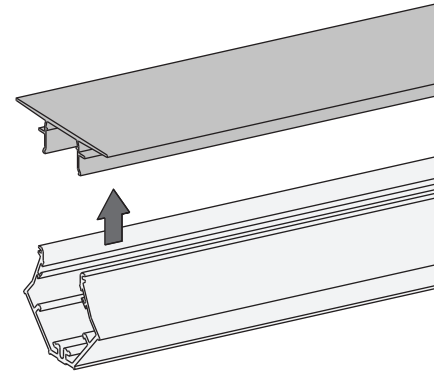US_93600109 (straight)

* the endplates are optional and only used if the profile ends before a wall (or ceiling):

USE AN ENDPLATE HERE
(PROFILE ENDS BEFORE THE WALL)
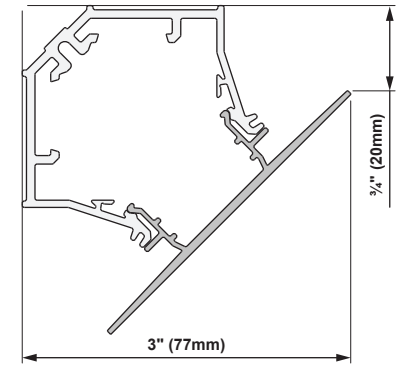
DON'T USE AN ENDPLATE HERE
(PROFILE IS ENDED BY THE WALL)
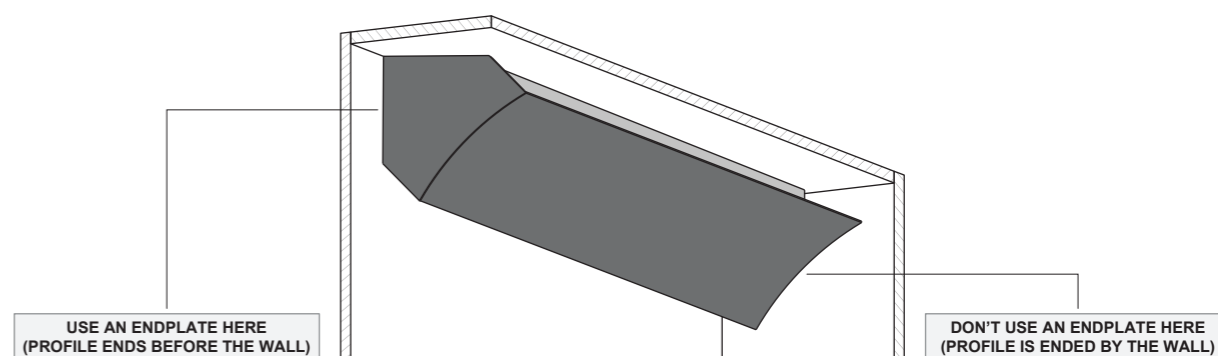
Como corner (preparation)
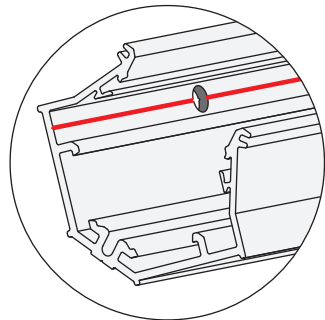
US_9360XXXX

Click the cover profile out of the base profile.
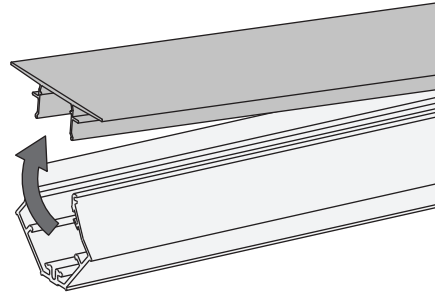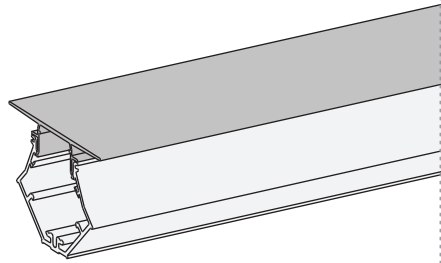
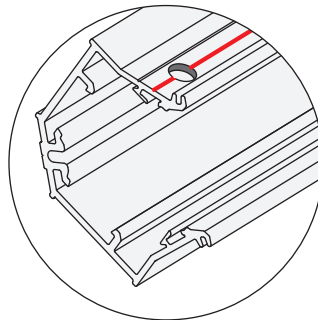## Prepare the base profile, drill the necessary holes (remove burrs after drilling).

MOUNTING
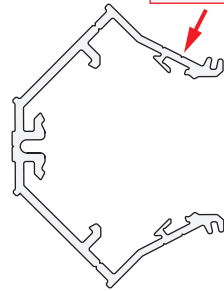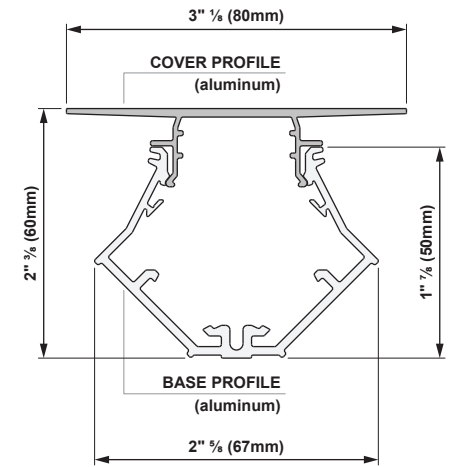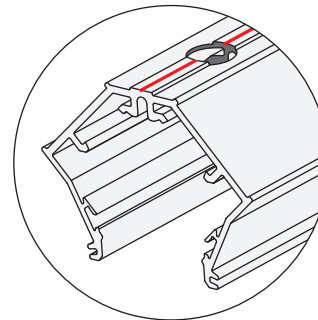maximum Ø ¼" (6mm)

DRILL GUIDE

LED STRIP CABLE
maximum Ø ¼" (6mm)

DRILL GUIDE

POWER SUPPLY
Ø ½" (12mm)

DRILL GUIDE

Dimensions, materials.

¾" (20mm)

3" (77mm)

3" ⅛ (80mm)

COVER PROFILE
(aluminum)

2" ⅜ (60mm)

1" ⅞ (50mm)

BASE PROFILE
(aluminum)

2" ⅝ (67mm)
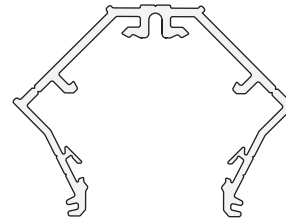
IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions.
- Save these instructions and refer to them when additions or changes
  in the configuration are made.
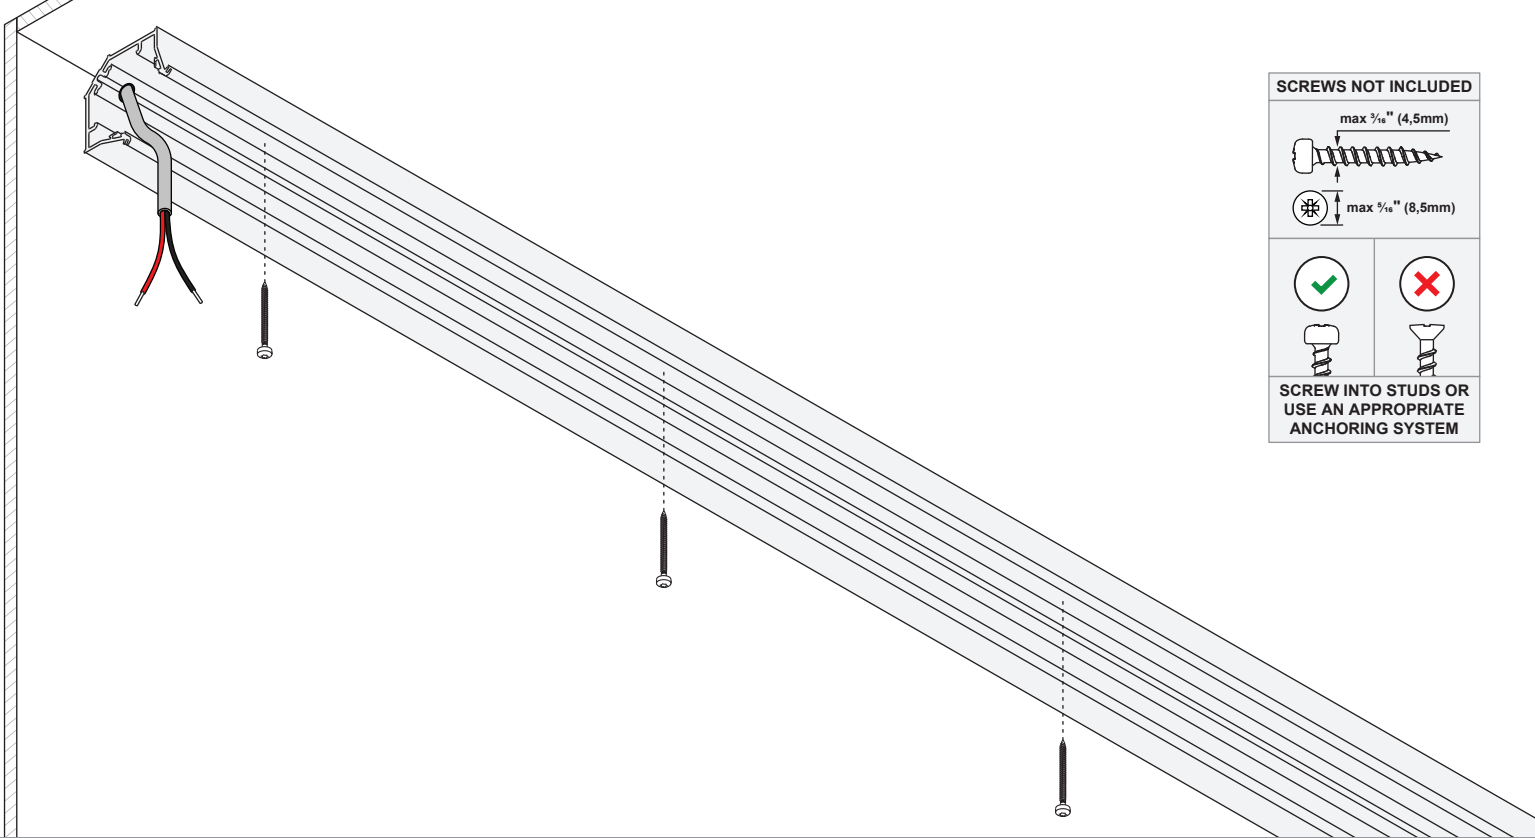
LED STRIPS, POWER SUPPLIES & ACCESSORIES

For latest version of available LED strips, power supplies & accessories
check www.supermodular.us or connect with your sales contact.

Como corner (mount the base profile)
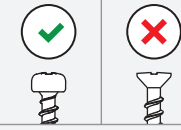
Mount the base profile to the wall or ceiling.
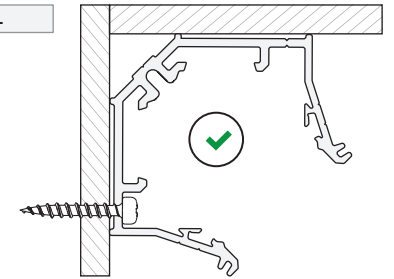
SCREWS NOT INCLUDED
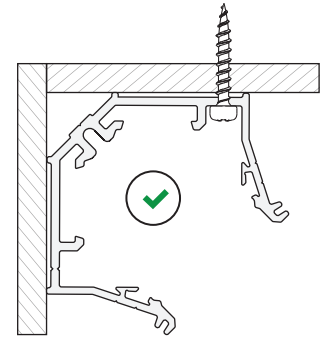
max ³⁄₁₆" (4,5mm)

max ⁵⁄₁₆" (8,5mm)

✔ ✖

SCREW INTO STUDS OR USE AN APPROPRIATE ANCHORING SYSTEM
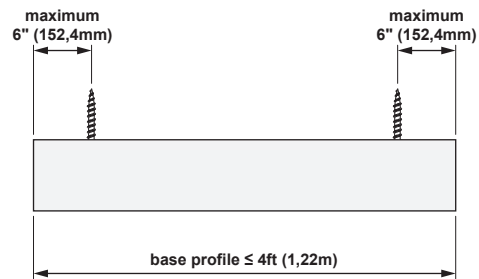
Fasteners, location.

WALL

✔

CEILING

✔

WALL & CEILING

✖

Fasteners, amount.

maximum 6" (152,4mm)

maximum 6" (152,4mm)

base profile ≤ 4ft (1,22m)

maximum 12" (300mm)

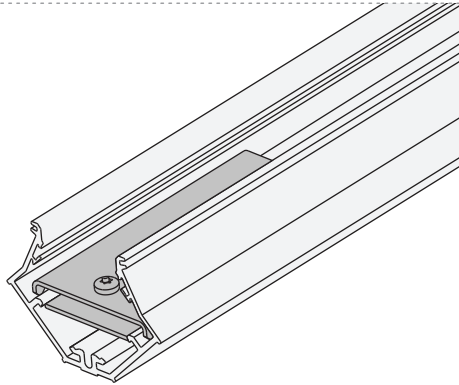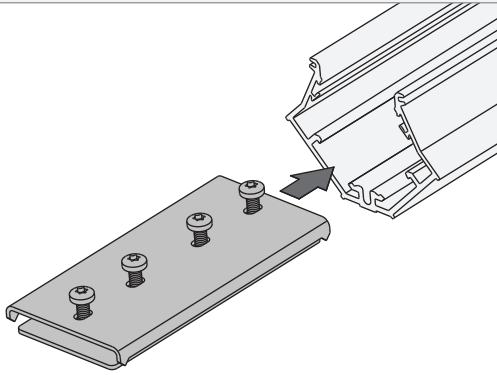minimum every 3ft 3" (1m)

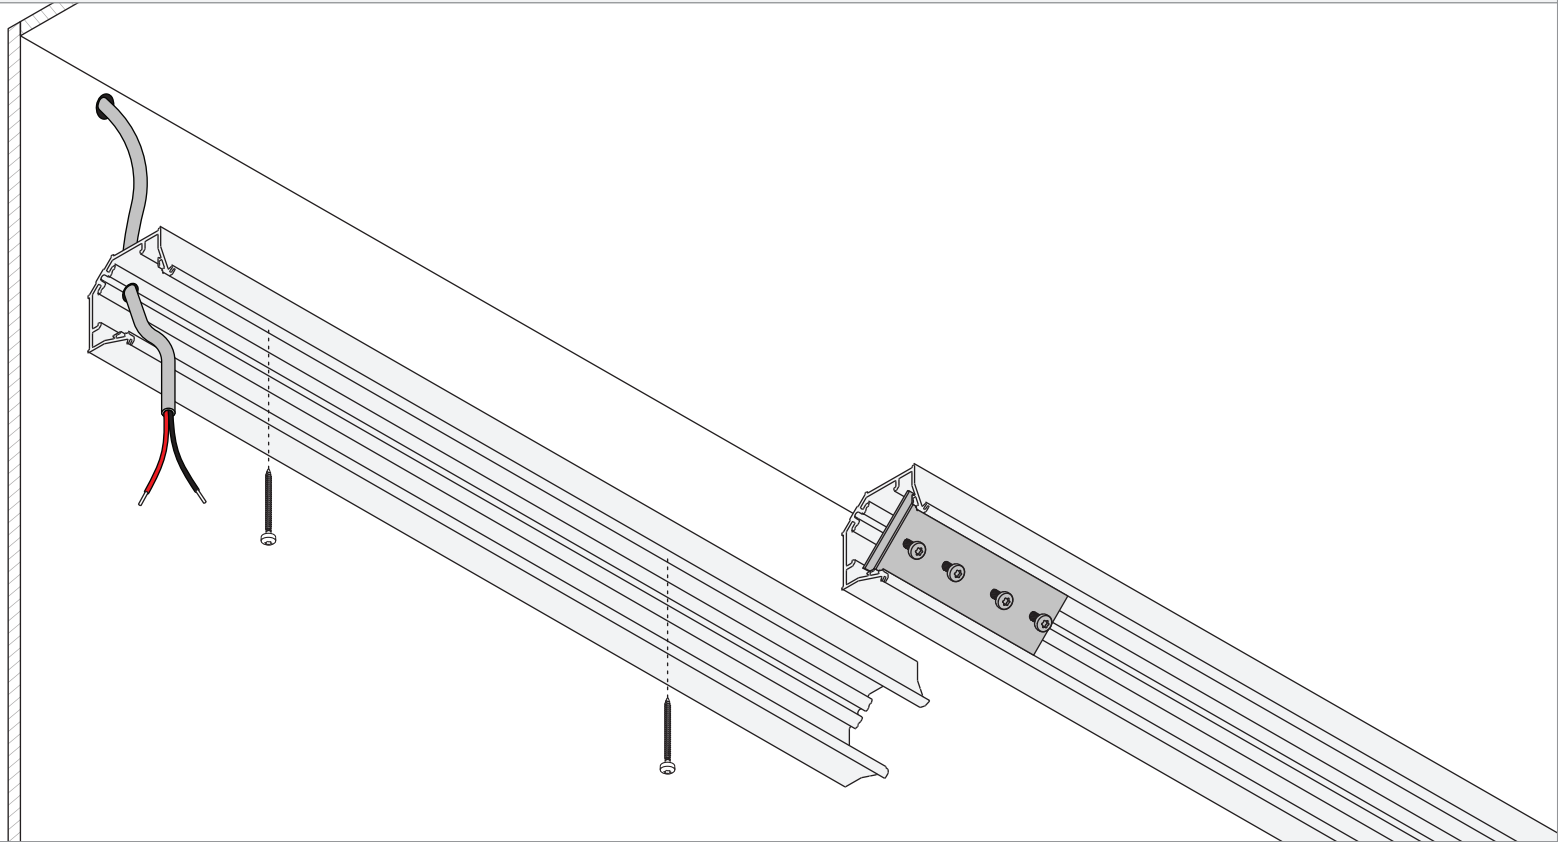maximum 12" (300mm)

base profile > 4ft (1,22m)
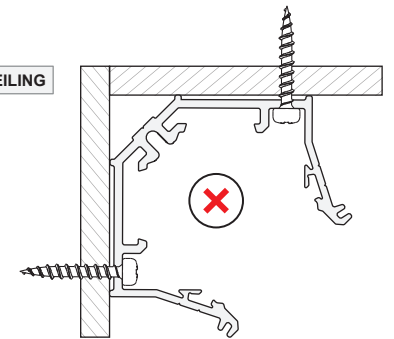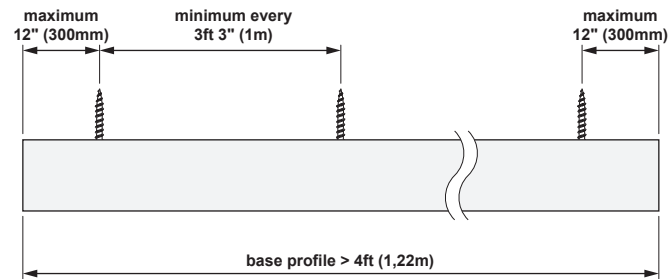
Como corner (mount the base profile - additional for 180° connection)
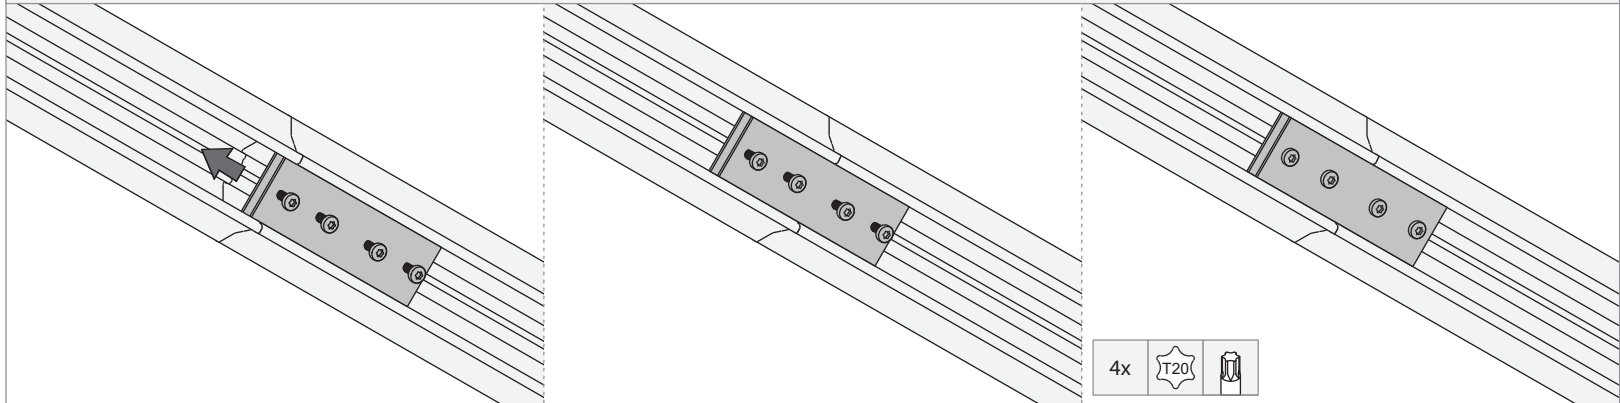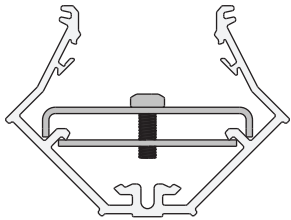
US_9360XXXX

Place the connection bracket in the first base profile.

Mount the first base profile to the wall or ceiling. Align the second base profile with the first and mount the same way.
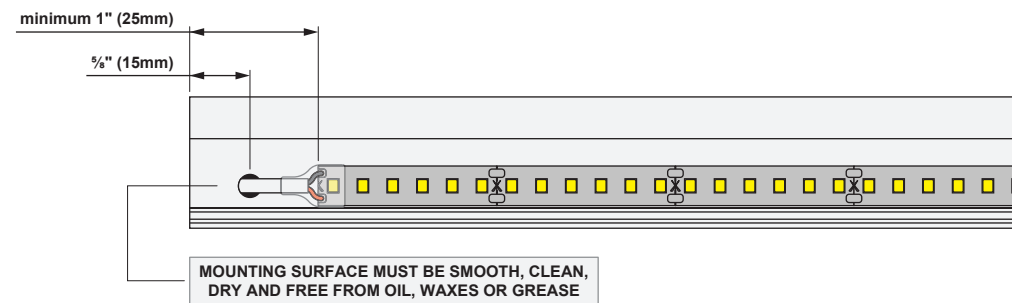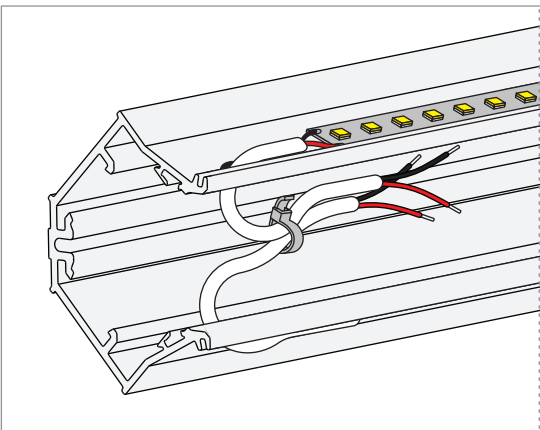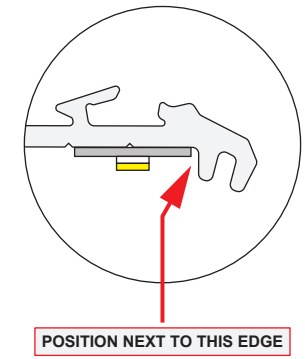
Slide the connection bracket over both profiles and tighten.

4x T20

Como corner (LED strip)

US_9360XXXX

Mount the LED strips only to the designated areas on the base profile.

UPLIGHT

DOWNLIGHT

NO NEED TO SPLIT THE LEDSTRIP INTO 2 PARTS
IF THE 180° CONNECTION IS PROPERLY INSTALLED

UPLIGHT

DOWNLIGHT

POSITION NEXT TO THIS EDGE

minimum 1" (25mm)

⅝" (15mm)

MOUNTING SURFACE MUST BE SMOOTH, CLEAN,
DRY AND FREE FROM OIL, WAXES OR GREASE

⚠
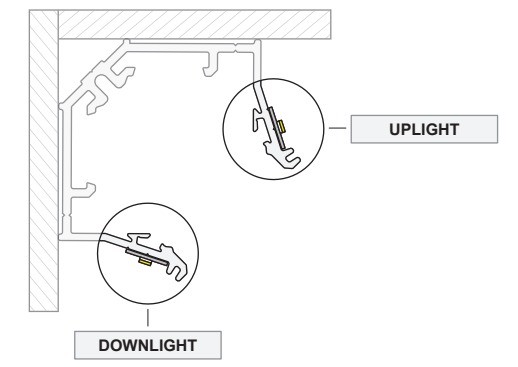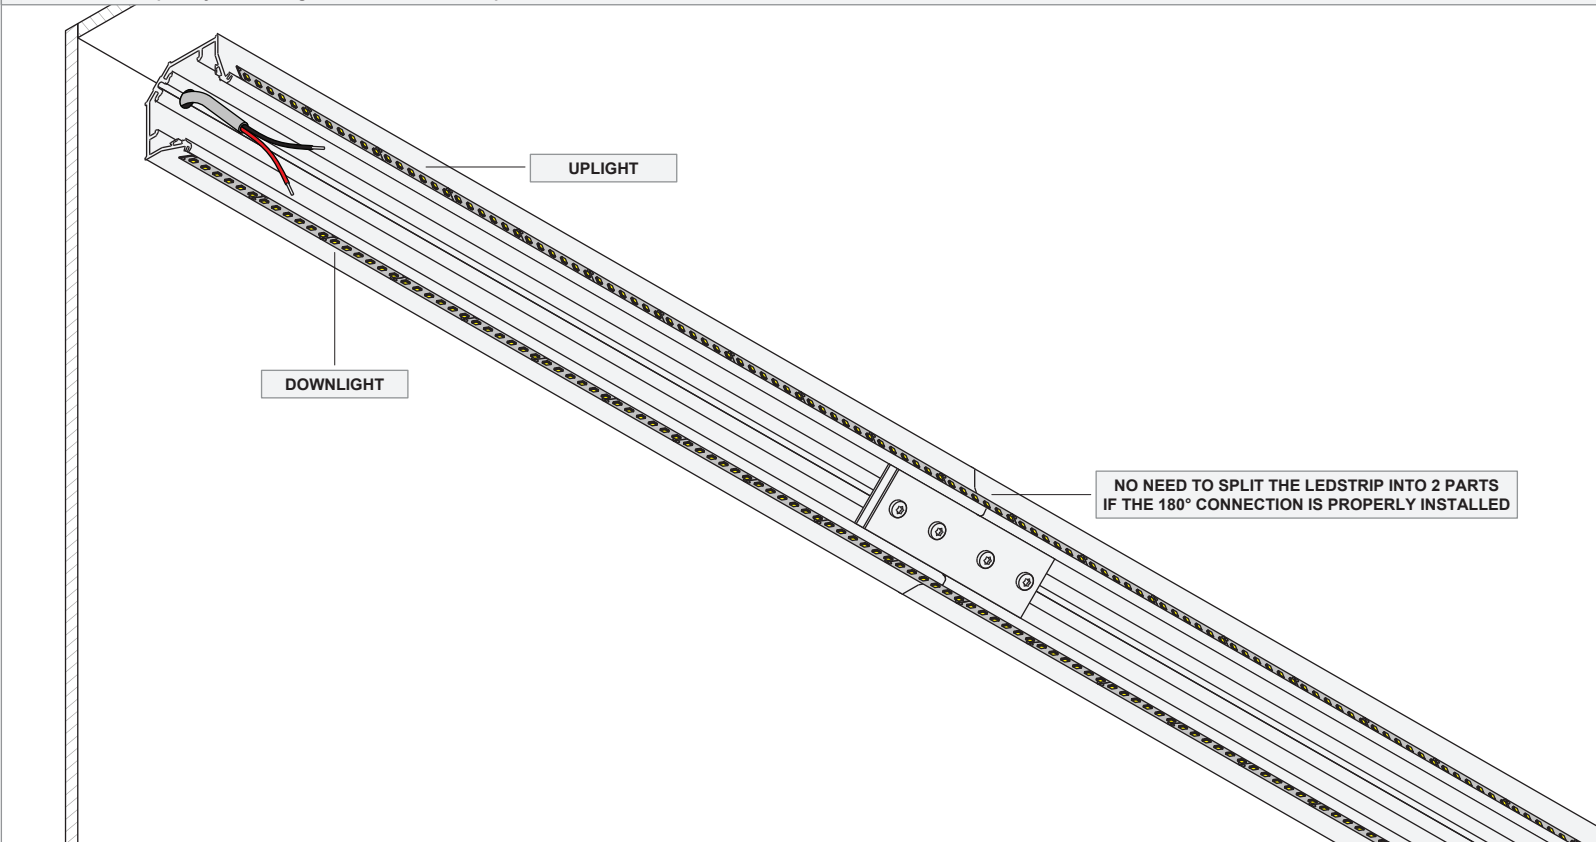
SEE INDIVIDUAL LED STRIP
INSTALLATION INSTRUCTION
FOR ALL MECHANICAL FEATURES
(CUTTING, MOUNTING ...)

⚠

SEE INDIVIDUAL LED STRIP
INSTALLATION INSTRUCTION
FOR ALL ELECTRICAL FEATURES
(RATINGS, CONNECTIONS ...)

Como corner (attach the cover profile)

US_9360XXXX

Slide the fall protection devices in the cover profile and tighten. Mount one at each end of the cover profile.
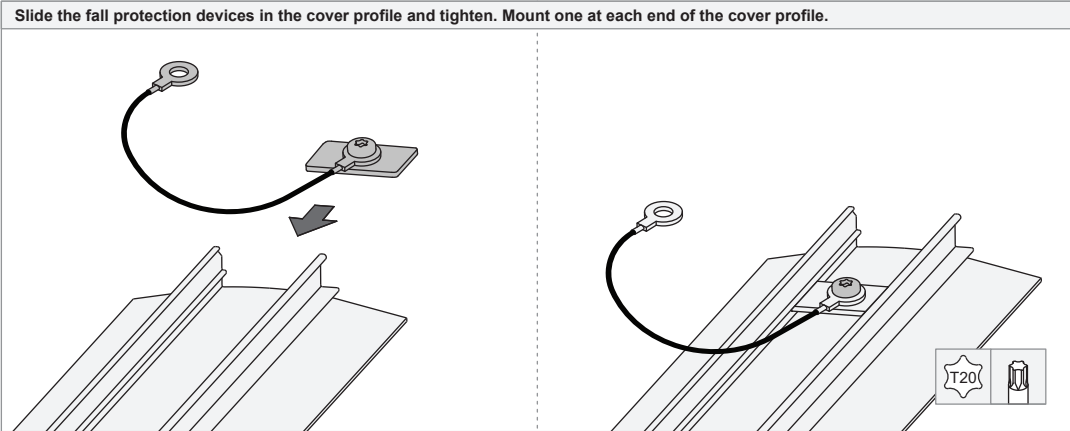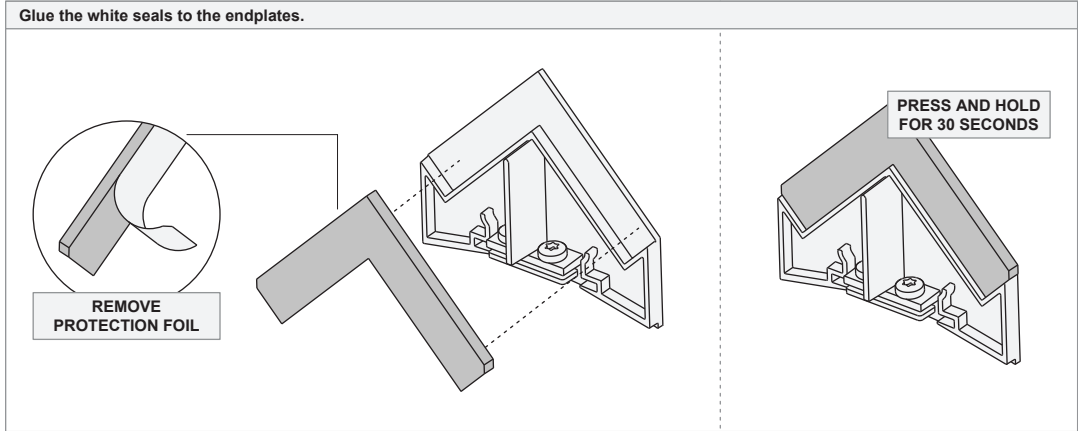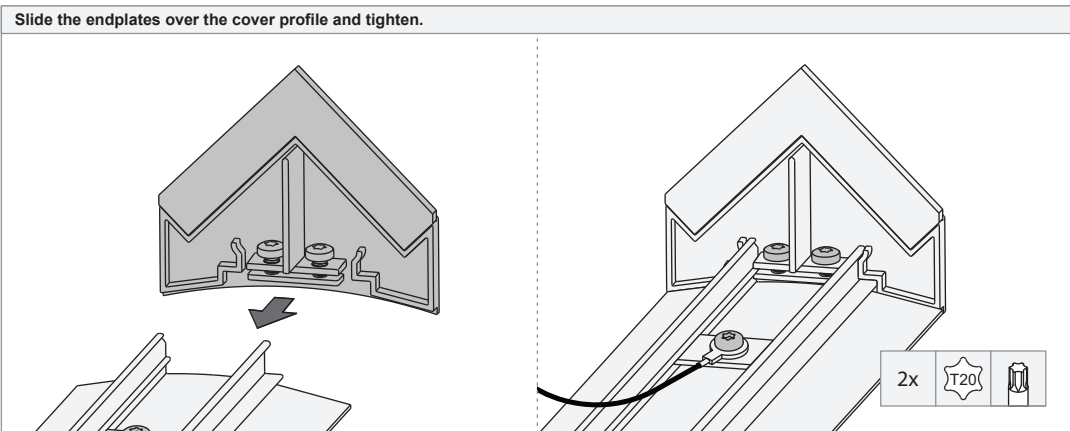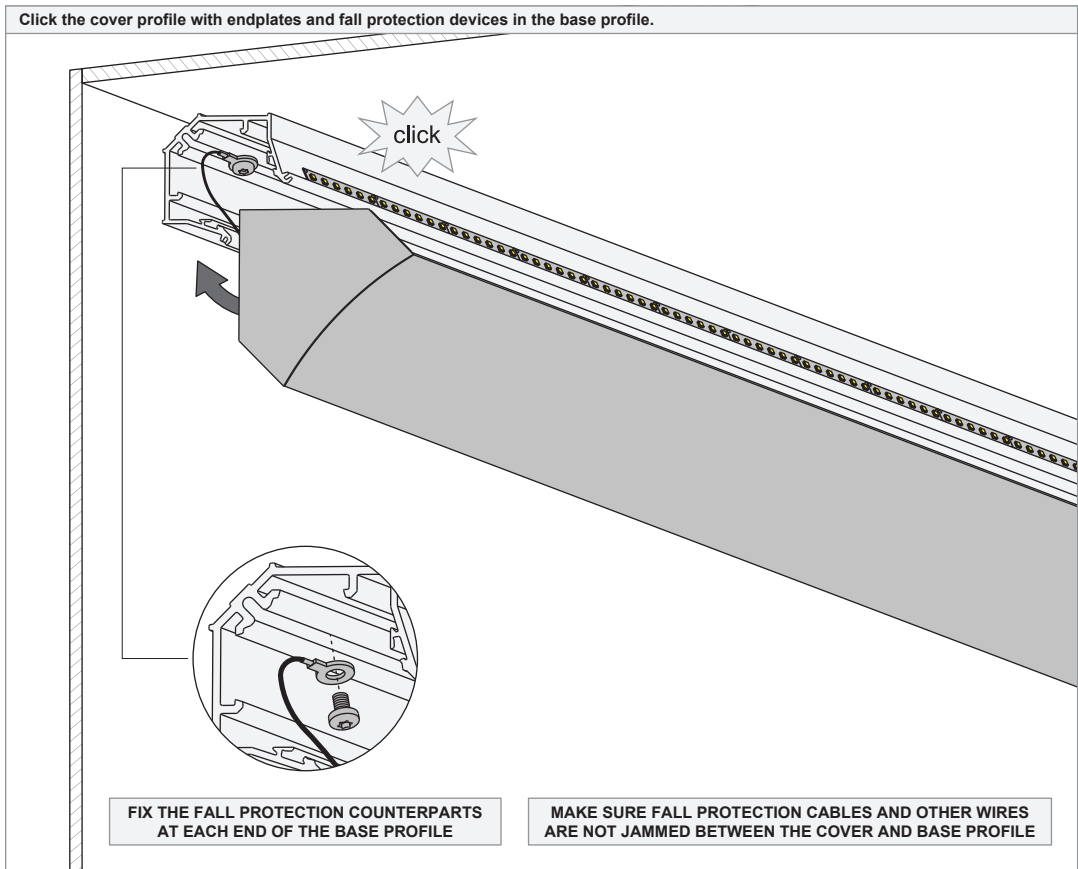
T20

Glue the white seals to the endplates.

PRESS AND HOLD FOR 30 SECONDS

REMOVE PROTECTION FOIL

Slide the endplates over the cover profile and tighten.

2x T20

The endplates are optional and only used if the profile ends before a wall (or ceiling).

USE AN ENDPLATE HERE
(PROFILE ENDS BEFORE THE WALL)

DON'T USE AN ENDPLATE HERE
(PROFILE IS ENDED BY THE WALL)

Click the cover profile with endplates and fall protection devices in the base profile.
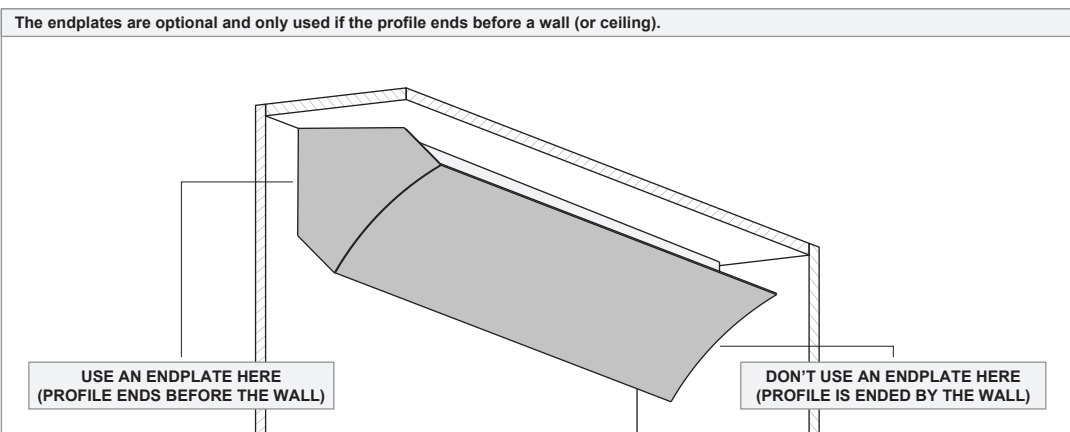
click

FIX THE FALL PROTECTION COUNTERPARTS AT EACH END OF THE BASE PROFILE

MAKE SURE FALL PROTECTION CABLES AND OTHER WIRES ARE NOT JAMMED BETWEEN THE COVER AND BASE PROFILE

Como corner (attach the cover profile - additional for 180° connection)

US_9360XXXX

Click the first cover profile in the base profile. Click the second cover in the base profile and align with the first.

click

LIGHTBLOCK PLATE
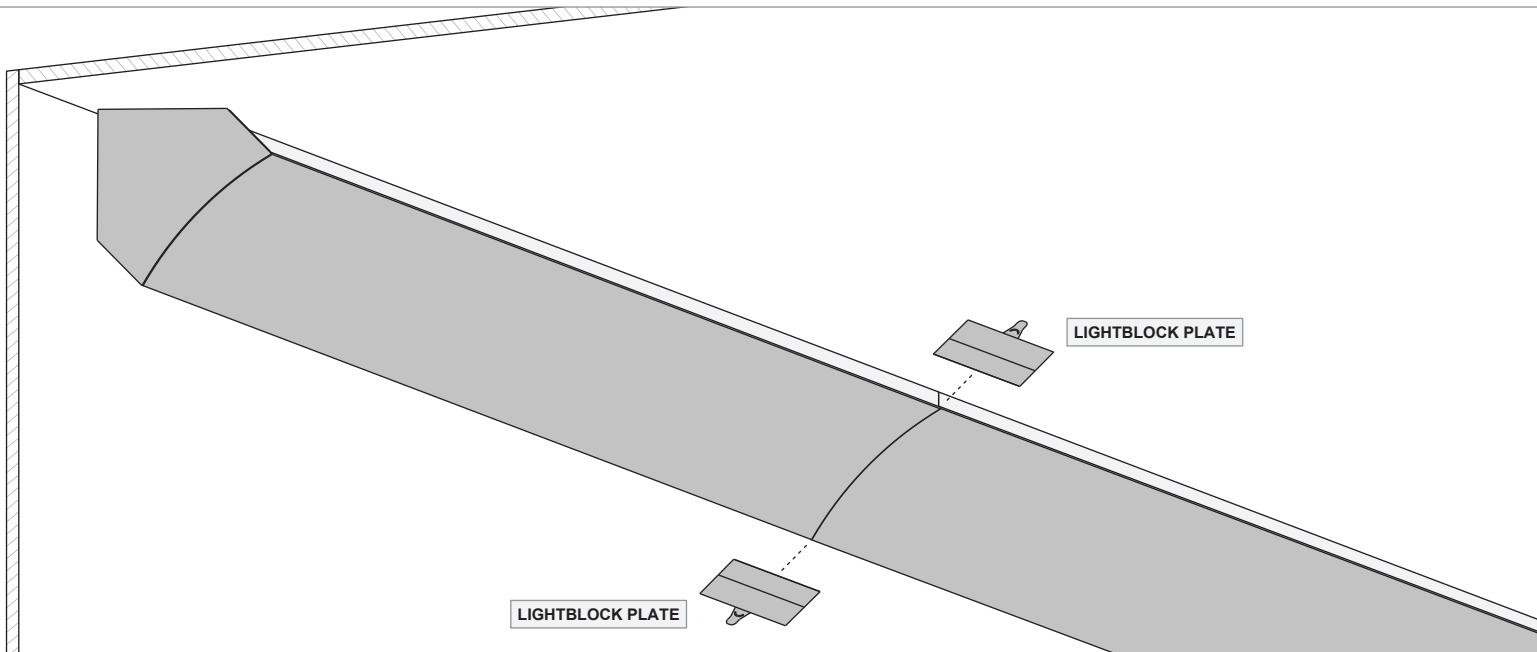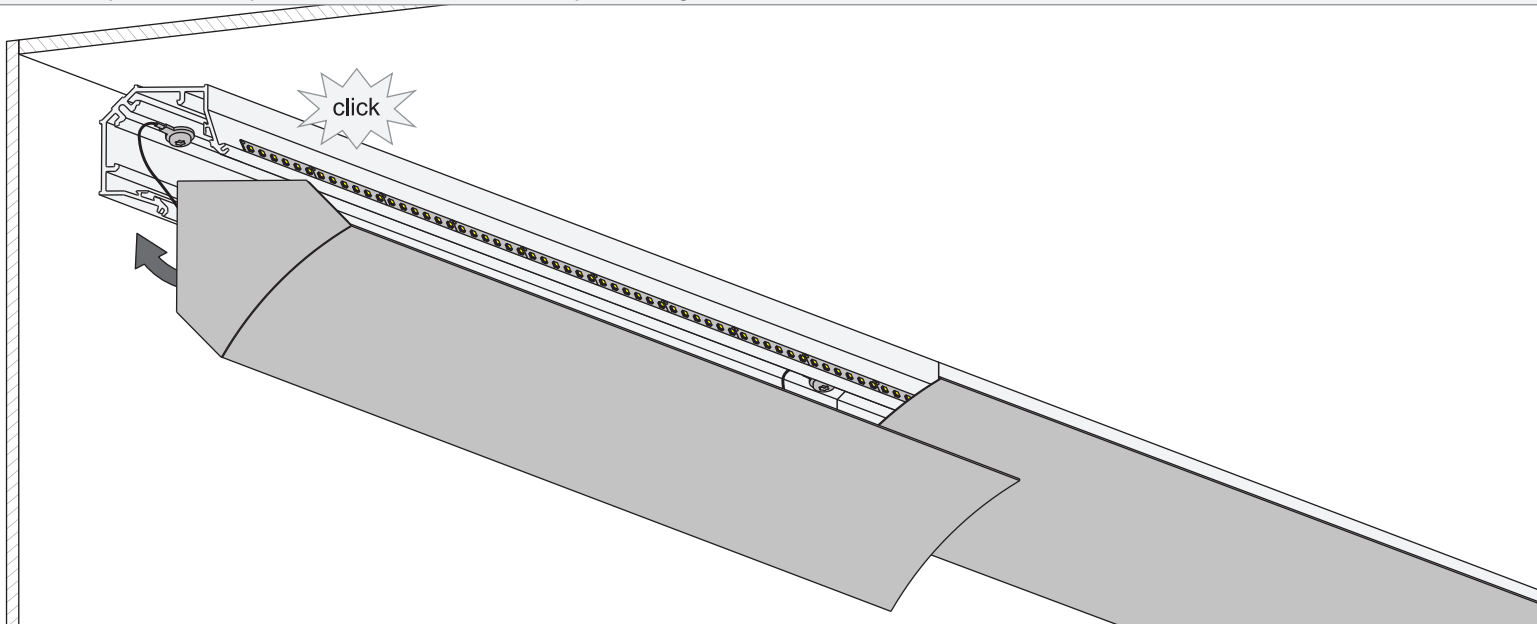
LIGHTBLOCK PLATE

Attach the lightblock plates to the seam of the cover profiles.

REMOVE PROTECTION FOIL

PRESS AND HOLD FOR 30 SECONDS

BEND THE END PARTS TO BREAK THEM OFF
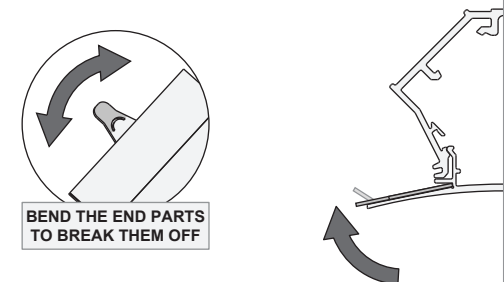
Como corner (paint instructions)

The Como corner cover profiles and endplates can be painted by the client in the color of their choosing.

HOW
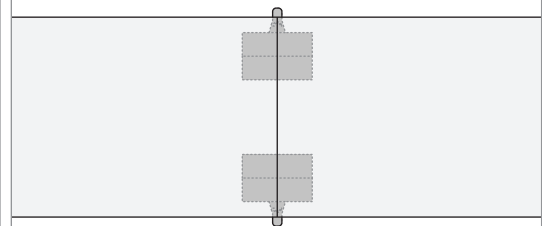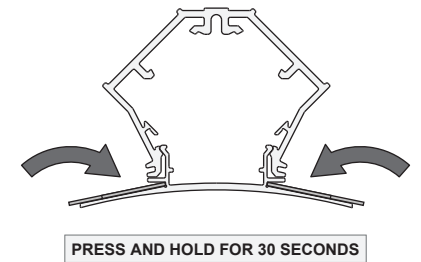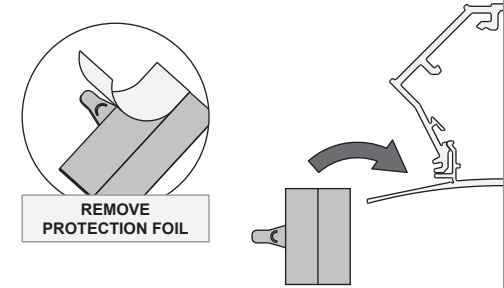It is simply a question of making the right preparations and using a primer which is compatible with the type of surface, in this case pre-treated aluminium.

PREPARATION
First, the powdercoated (polyester based) aluminium must be sanded down with a fine abrasive material (e.g. Scotch Brite scrubber) and degreased with a powerful detergent. After this, it must be thoroughly rinsed with water to remove any residual degreaser.

PRIMER
An adhesive primer has to be applied with a brush or roller. This type of paint provides excellent adhesion to non-porous materials, such as non-ferro metals, as well as powdercoated surfaces. No color pigments should be added to the primer because this may adversely affect the quality of the adhesion. Neither is it necessary to paint with this primer for hiding power. Both water-based and solvent-based primers can be used, the latter on a 'acrylate in solution' basis. The adhesive primer must be applied in the right conditions and left to dry according to the instructions of the paint manufacturer.

PAINT
All sorts of conventional paints can be used as a finish for this primer (both water-based and solvent-based). As for primers on a 'acrylate in solution' basis, make sure not to use any paints that contain a similar solvent as the adhesive primer.
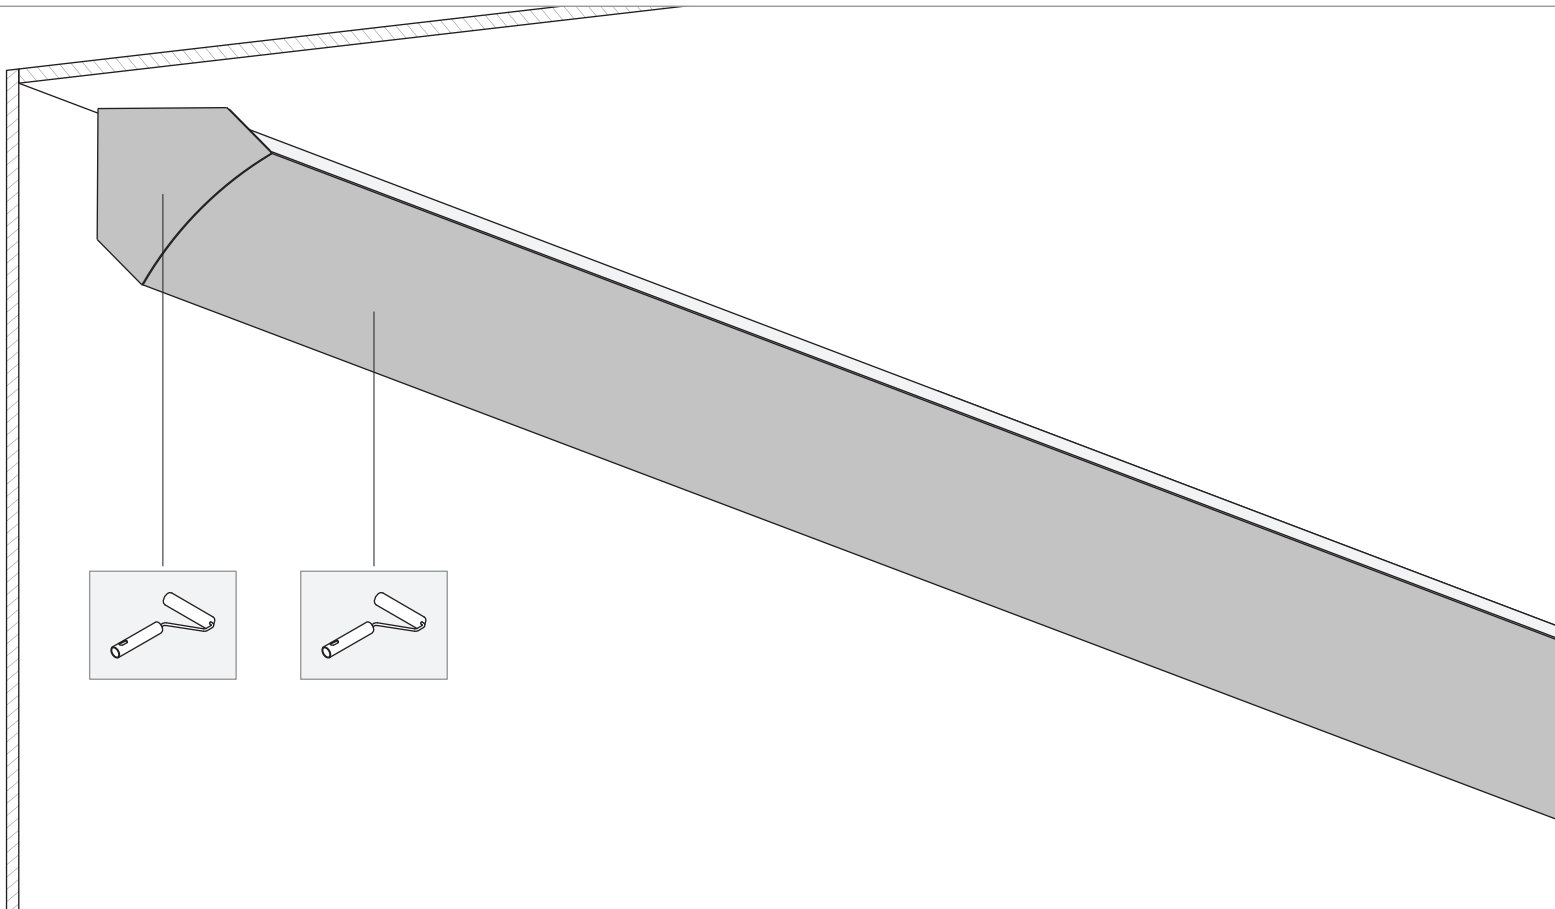
BASE PROFILE - DO NOT PAINT
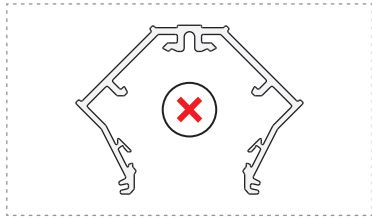
COVER PROFILE - DO NOT PAINT THIS AREA